CLOSING WHEEL MOUNTING INSTRUCTIONS

Case IH 500 Drill


Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments. **PLEASE:** Read instructions completely and verify all package contents before beginning installation.





- 1. Remove original closing wheel.
- 2. Slide the new cast wheel and three 1/2" spacers onto the 4" bolt included.
- 3. Screw this assembly into the place of the original wheel.

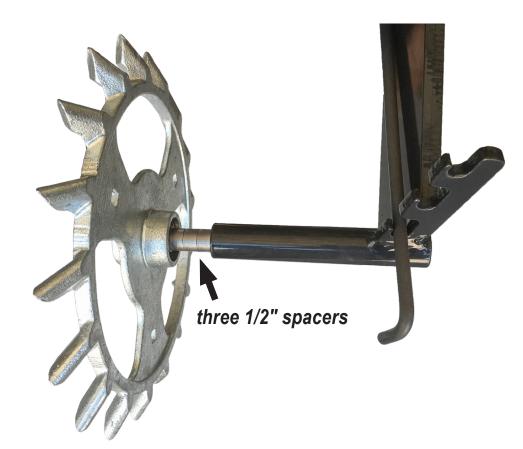


CAST MOHAWK WITH HUB MOUNTING INSTRUCTIONS

Case IH 500 Drill

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments. **PLEASE:** Read instructions completely and verify all package contents before beginning installation.

1. Remove original closing wheel.

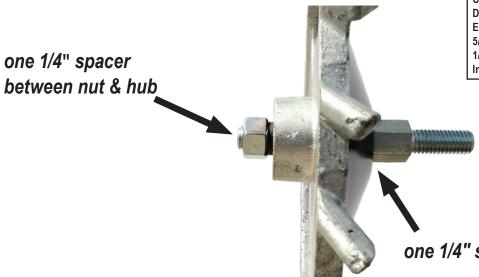

 Cast Wheel w/ Hub Package Contents (per single side)

 Item
 Quantity

 Cast Mohawk Wheel
 ...
 1

 Deep Hub
 ...
 1

 Eccentric Bolt
 ...
 1

 5/8" Nut
 ...
 1

 1/4" Spacer
 ...
 2

 Instruction Sheet
 ...
 1

one 1/4" spacer between wheel & hub

- 2 Slide the new cast wheel, hub and spacers onto the 4" bolt included in this order:

 BOLT ← CAST WHEEL ← 1/4" SPACER ← HUB ← 1/4" SPACER ← 1/2" SPACER ← 1/2" SPACER
- **3.** Screw this assembly into the place of the original wheel:

[bolt \leftarrow cast wheel \leftarrow 1/4" spacer \leftarrow hub \leftarrow 1/4" spacer \leftarrow 1/2" spacer \leftarrow 1/2" spacer] \rightarrow DRILL



