

CAST CLOSING WHEEL MOUNTING INSTRUCTIONS

John Deere Drill

Before working on your planter or drill




DANGER: When storing or working on the drill always install cylinder stops or place the drill on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation.

1. Remove original closing wheel.
2. Insert the bolt included in place of the original bolt. Slide the large spacer and cast Mohawk onto it. The **tips of the Mohawk should be pointed down in the back.**
3. Place the small spacer on the outside of the wheel. Hold in place with the lock nut included.

Cast Closing Wheel Package Contents (per single row)

Item	Quantity
Closing Wheel (cast Mohawk or Zipper) . . .	1
5/8" x 7-1/2" Bolt	1
5/8" Lock Nut	1
5/8" x 2-1/2" Spacer	1
5/8" x 1/4" Spacer	1
Instruction Sheet	1

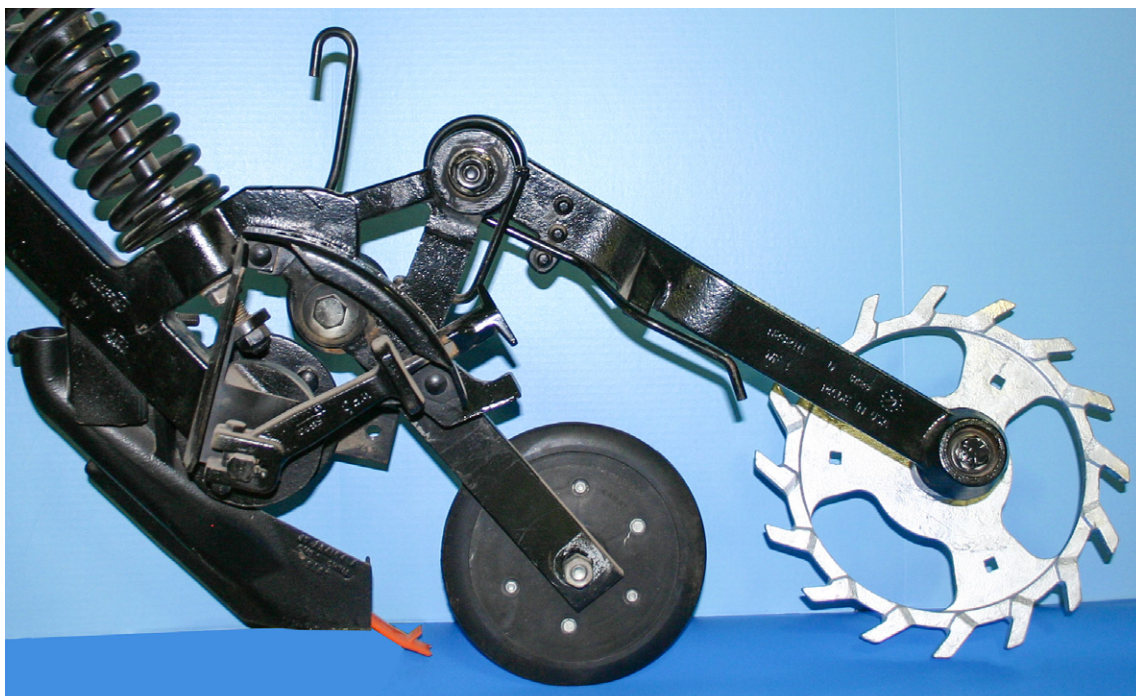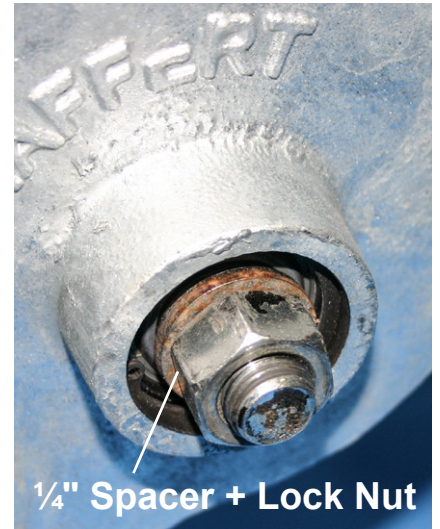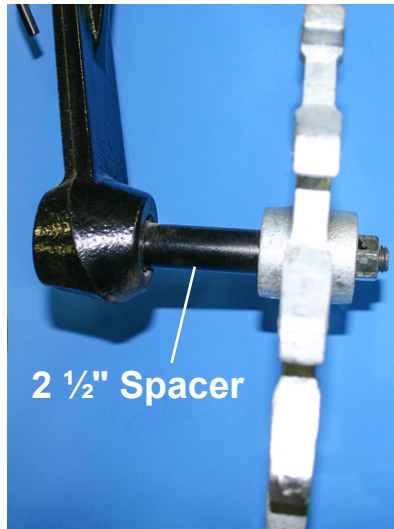

CAST WHEEL WITH HUB MOUNTING INSTRUCTIONS


John Deere Drill

Before working on your planter or drill

DANGER: When storing or working on the drill always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation.

Hub Package Contents (per single row)	
Item	Quantity
Wheel Hub	1
5/8" x 1/4" Spacer	1
Instruction Sheet	1

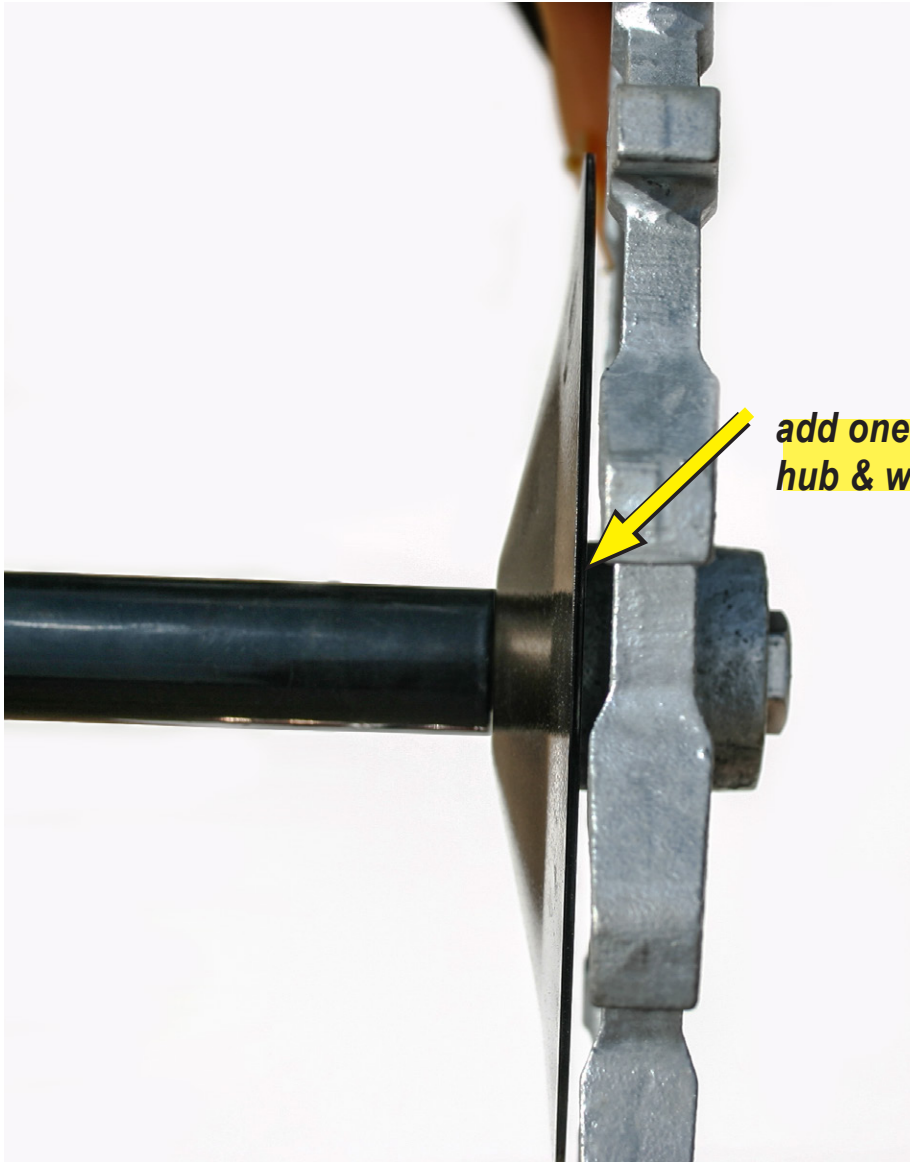

add one 1/4" spacer between hub & wheel

When installing the hub with your cast wheel, slide the parts on the 7½" bolt in this order:

BOLT [→DRILL] ←2½" SPACER ←HUB ←1/4" SPACER ←CAST WHEEL ←1/4" SPACER ←LOCK NUT