

JUNG STEEL RING MOUNTING INSTRUCTIONS

Gauge Wheels


Before working on your planter or drill

DANGER: When storing or working on the planter/drill always install cylinder stops or place the planter/drill on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely before beginning installation.

STEEL RING: Acts as a shield or guard to prevent wear from the disc opener blades on the inside of the rubber gauge wheel tire. Will extend the life of your gauge wheel.

Before you begin, verify all "package contents" items.
Qty is per single row.

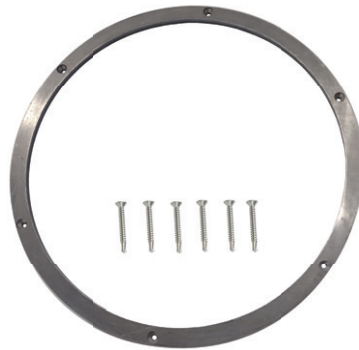

Gauge Wheel Steel Ring	
Package Contents for part #: JUNG RING	
Qty	Item
1	Steel Ring
6	2" Deck Screw Hex Head
1	Instruction Sheet

MOUNTING THE STEEL RING TO THE GAUGE WHEEL

#1: Remove gauge wheel and lay flat so that the inside edge of the tire is faced up.

#2: Lay steel ring into the groove of the inside of the tire.
The screw holes on the ring should face concave-side up.



#3: For best results, the **steel ring should sit approximately 1/16" above** the edge of the rubber tire.
Insert lock washers (not included) as needed underneath the steel ring to achieve the 1/16" distance.



#4: Securely screw the steel ring to the rubber tire with the hex head screws.
The heads of the screws should sit flush with the steel ring.



#5: Re-install gauge wheel.