


# DOSATRON® MOUNTING INSTRUCTIONS

## Dosatron Direct Injection Kit for Planters

(Read Instructions Completely before Beginning Installation)

Before working on your planter or drill

**DANGER:** When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

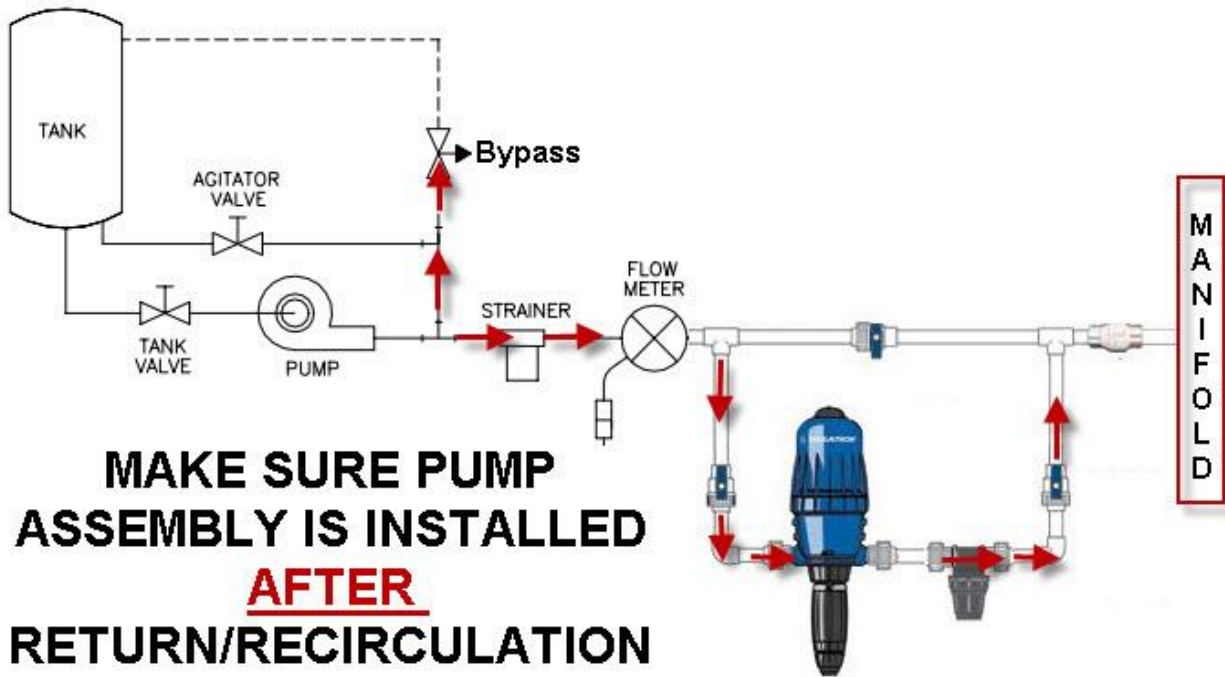


LIQUID FERT	OZ OF	HEADLINE	RATE	
GPA	LIQ FERT	4	5	6
2	256	1.56%	1.95%	
3	384	1.04%	1.30%	1.56%
4	512	0.78%	0.98%	1.17%
5	640	0.63%	0.78%	0.94%
6	768	0.52%	0.65%	0.78%
7	896	0.45%	0.56%	0.67%

### ADJUSTING THE INJECTION RATE (with pressure off)

**IMPORTANT !** Use no tools.

- Adjustment must be made when there is no pressure in the DOSATRON.
- Turn off the water supply and allow the pressure to drop to zero.
  - Unscrew the blocking ring (Fig. 13).
  - Screw or unscrew the adjusting nut in order to line up the 2 peaks of the eyelet with the desired ratio on the scale (Fig. 14).
  - Tighten the blocking ring (Fig. 15).

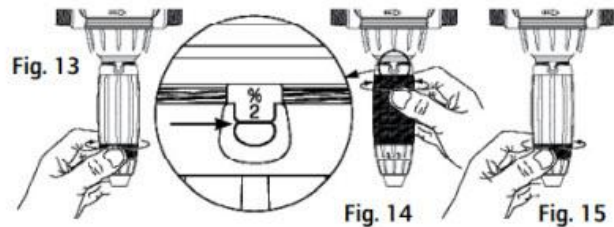

**\*\*\*IMPORTANT\*\*\***

The Dosatron manual is provided and is the customers responsibility to read & understands installation, usage and maintenance of the Dosatron pump.