
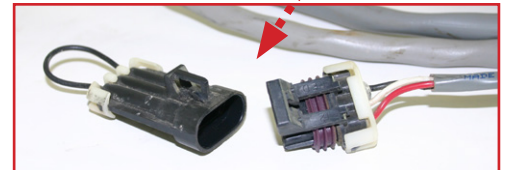


# PUMP SYSTEM MOUNTING INSTRUCTIONS

## Electrical Connections

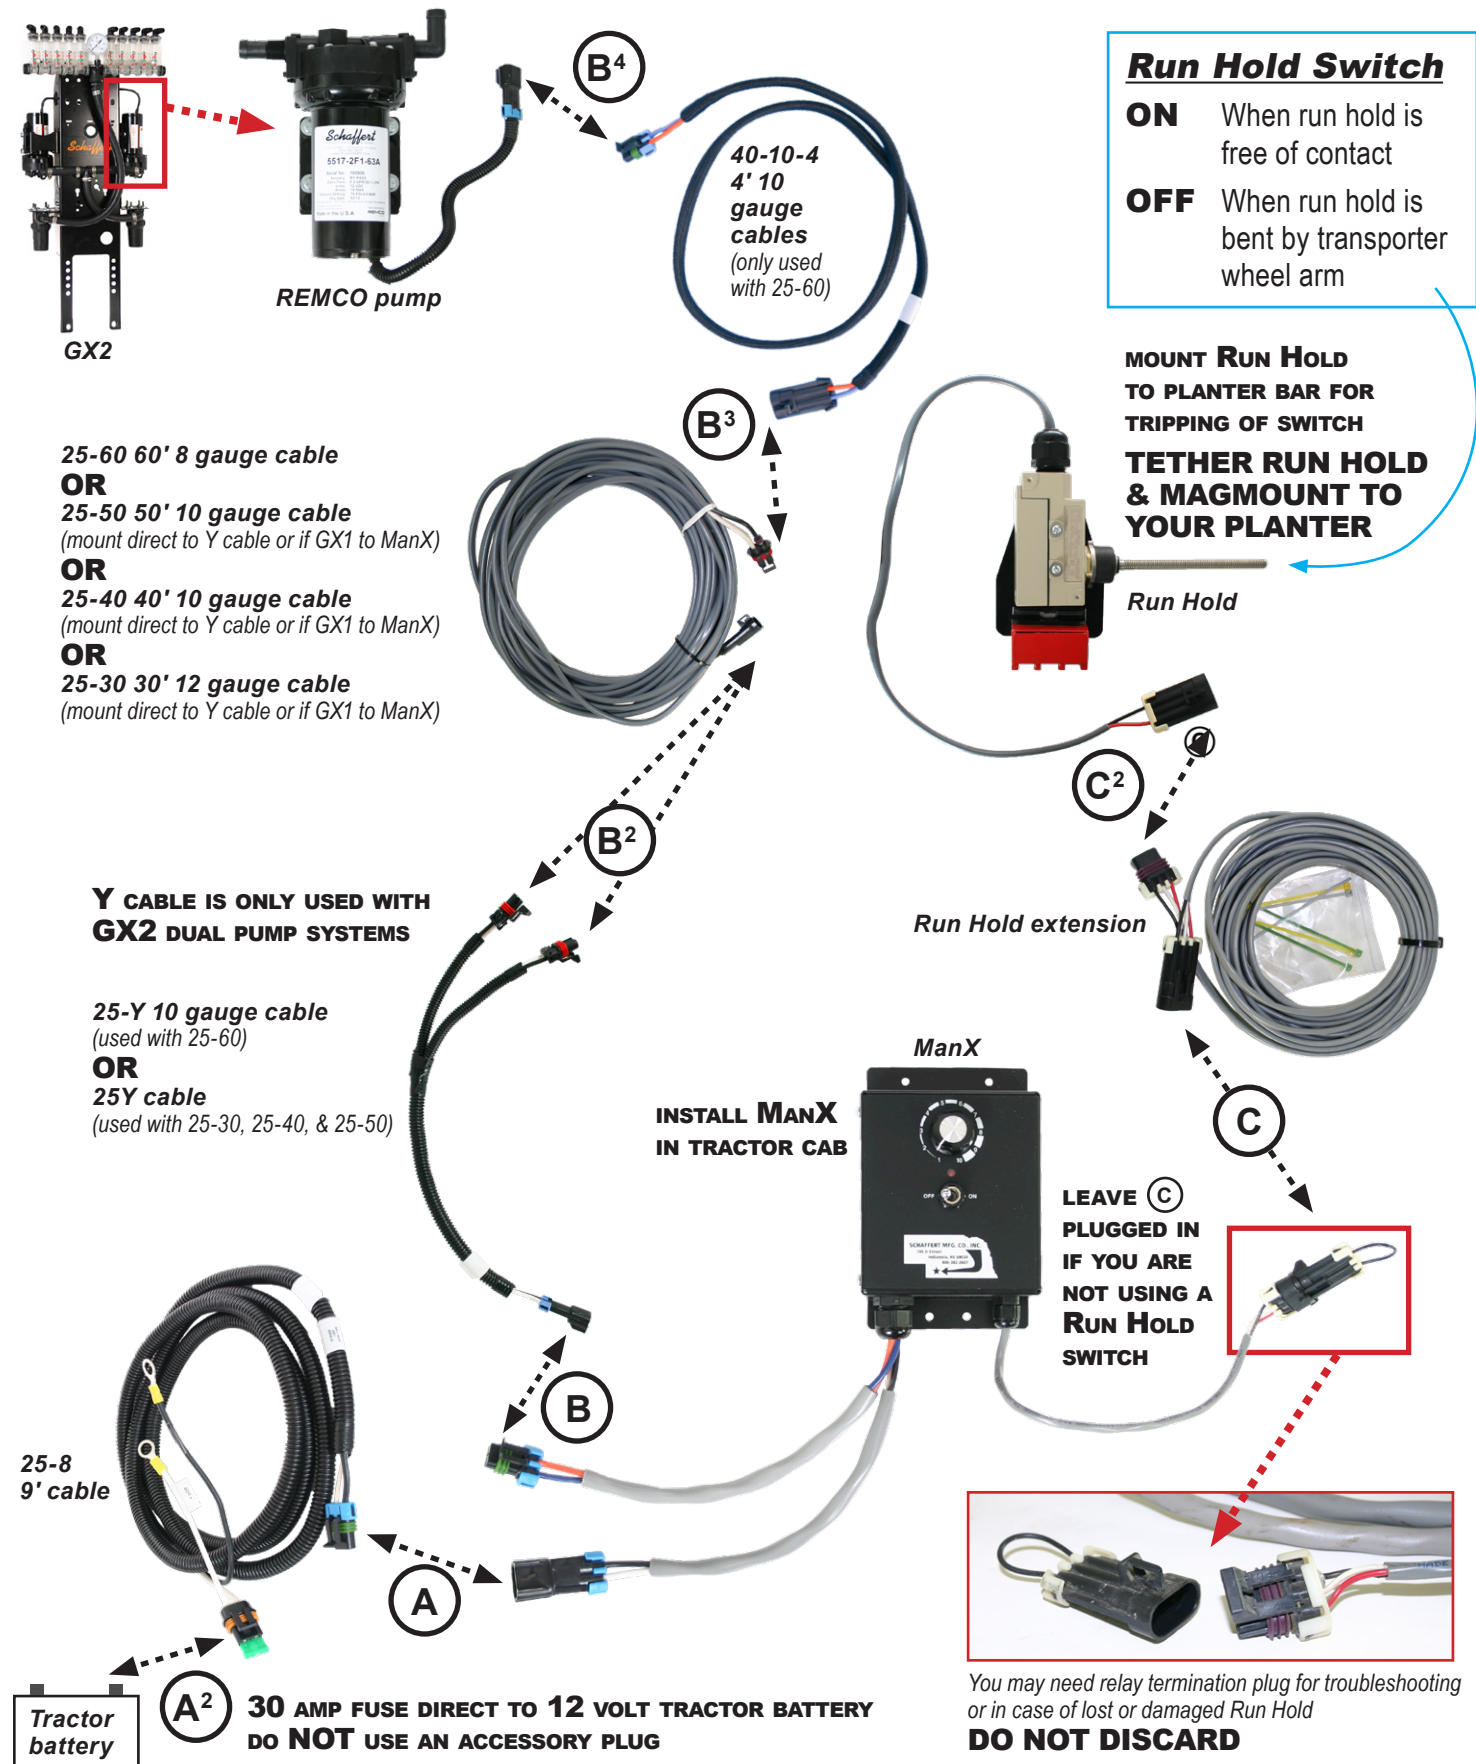

You may need relay termination plug for troubleshooting or in case of lost or damaged Run Hold  
**DO NOT DISCARD**

# PUMP SYSTEM MOUNTING INSTRUCTIONS

## Electrical Connections

