

PUMP SYSTEM MOUNTING INSTRUCTIONS

ManX Controller

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

 
PLEASE: Read instructions completely and verify all package contents before beginning installation

Extended Warranty Option

It's simple! Just complete the registration for this product **ONLINE** at www.micro-trak.com and we'll extend your warranty for up to three years*, at no additional charge.

Registration information is for internal use only.

* Some limitations apply. See warranty statement for details.

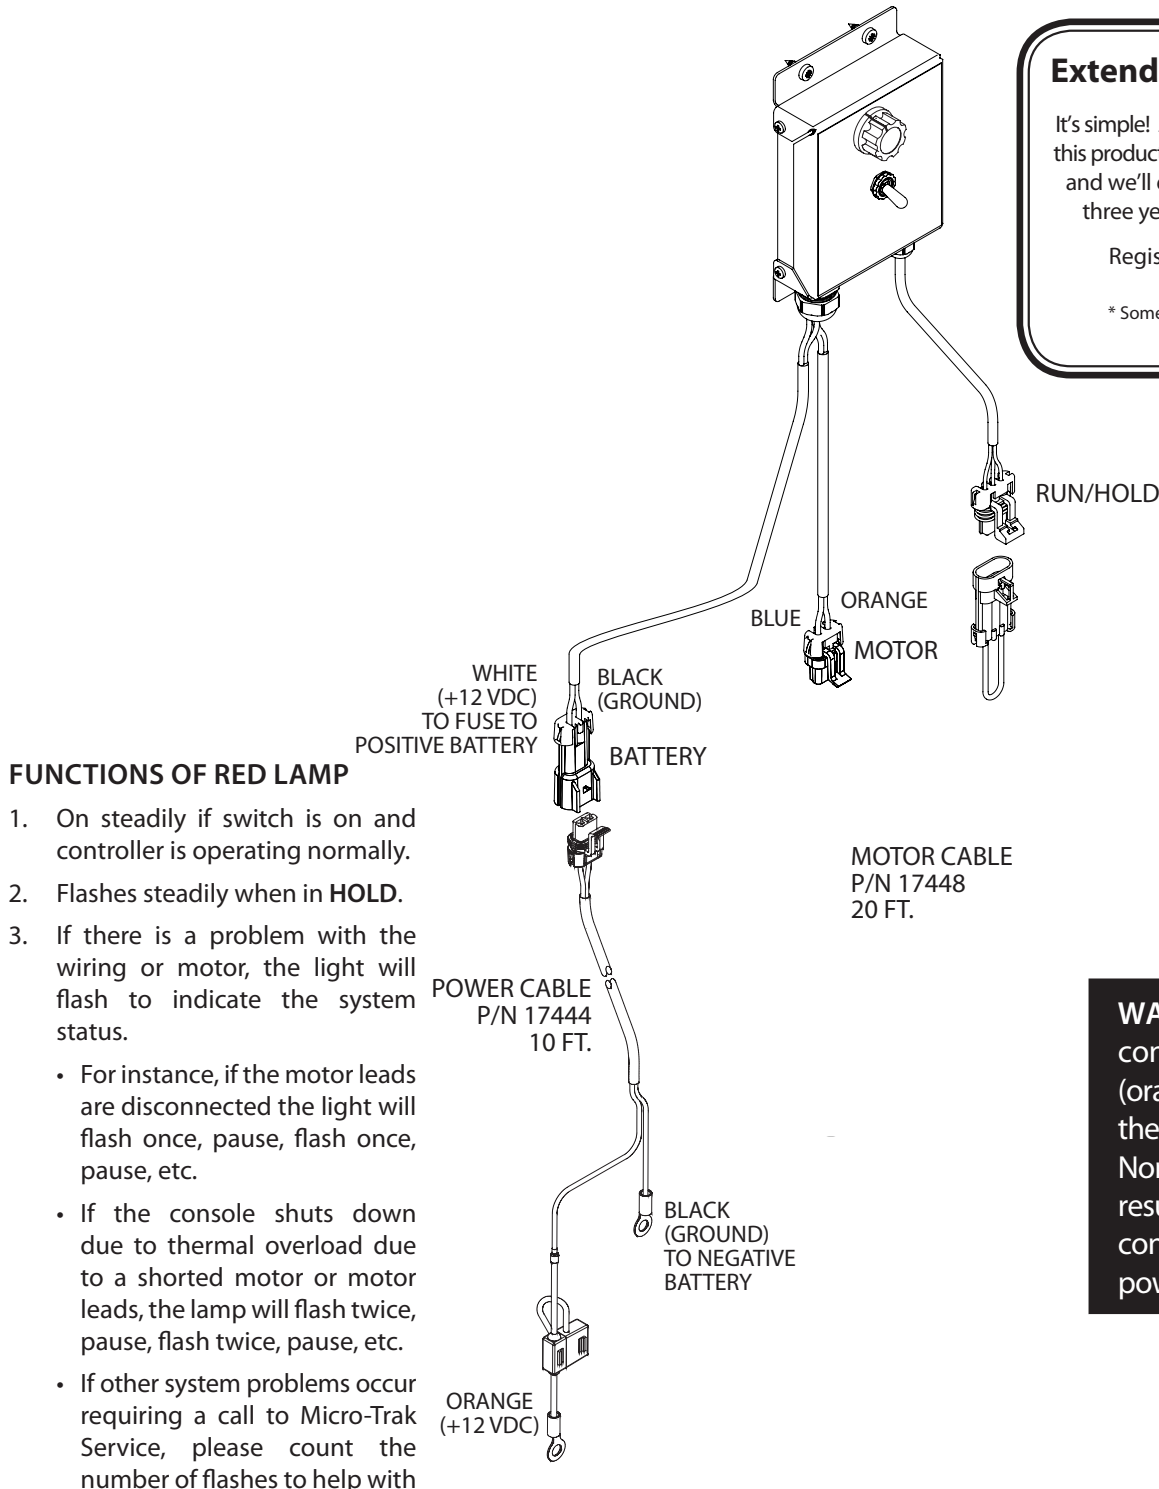

FUNCTIONS OF RED LAMP

1. On steadily if switch is on and controller is operating normally.
2. Flashes steadily when in **HOLD**.
3. If there is a problem with the wiring or motor, the light will flash to indicate the system status.
 - For instance, if the motor leads are disconnected the light will flash once, pause, flash once, pause, etc.
 - If the console shuts down due to thermal overload due to a shorted motor or motor leads, the lamp will flash twice, pause, flash twice, pause, etc.
 - If other system problems occur requiring a call to Micro-Trak Service, please count the number of flashes to help with

WARNING: DO NOT connect the motor leads (orange and blue wires) to the battery or power supply. Non-warranty damage will result if the motor leads are connected to the battery or power supply.