

# MOHAWK™ WHEEL MOUNTING INSTRUCTIONS

## Mohawk Cast Mohawk Mohawk Max

Before working on your planter or drill

**DANGER:** When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

**PLEASE:** Read instructions completely and verify all package contents before beginning installation.



**NOTE:** *Do not* turn your planter with the wheels in the ground. If you have GPS or guidance, make sure the planter is fully in the air before turning the planter.

Mohawk Wheel  
Package Contents included in part #:  
MO MOML/R CMO MMAX  
(per single side)

Item	Quantity
Mohawk Wheel (standard or cast) . . . . .	1
Instruction Sheet . . . . .	1



Remove the original closing wheels, and use the existing 5/8" x 3.5" bolt and nut to mount the Mohawk wheels to your tail section.

The Mohawks should be mounted so that **the fingers are pointed down in the back** (so that they will be pointed down when they exit and release the soil).

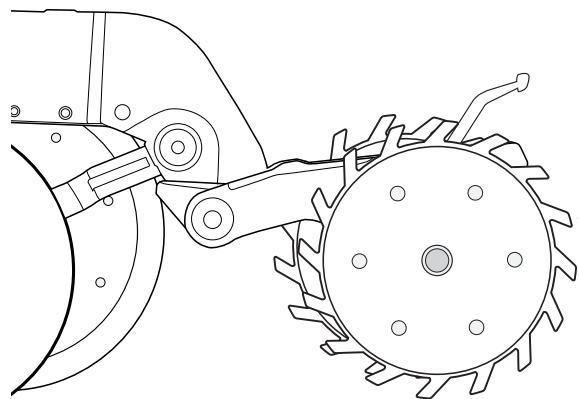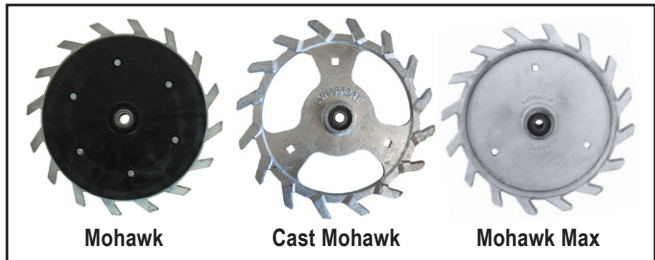

fingers angled down in the back

When mounting Mohawk wheels, measure the space between the cast rings directly under the lowest point of the rim. **There needs to be 2" - 2.5" distance between wheels** at this point.

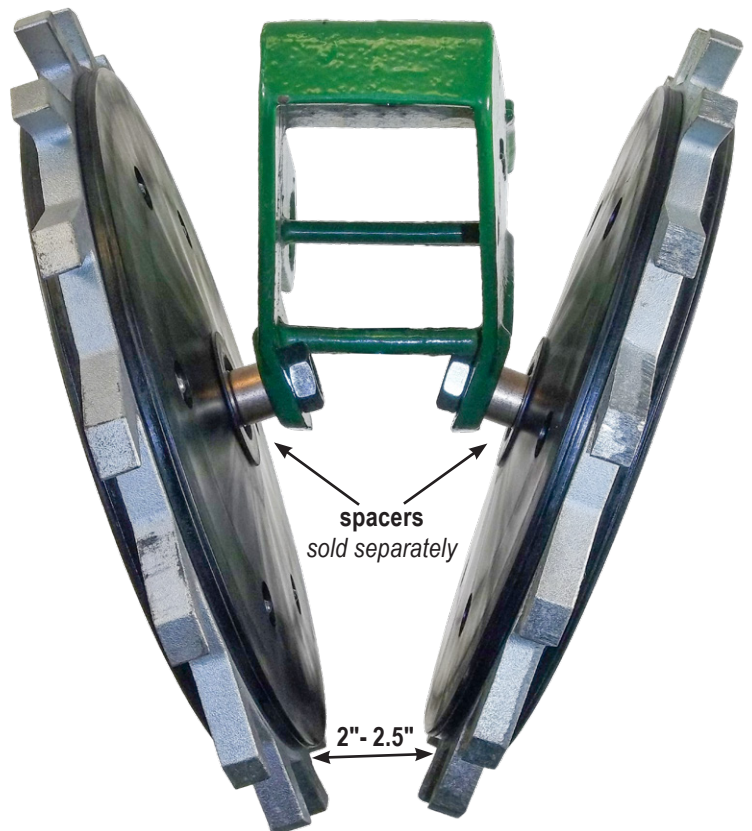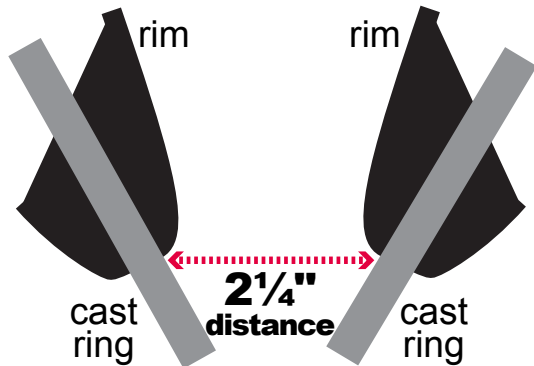

**You may need to insert washers or spacers (sold separately) on the inside of each wheel** in order to achieve this distance. You will not need spacers if you are running the Mohawk with the G2 liquid fertilizer disc (these spacers are already built in).

**SEE ALSO : MOHAWK/ZIPPER TROUBLESHOOTING Setting the Wheel Distance**