

ORIFICE MOUNTING INSTRUCTIONS

Tee-Jet Check Valves

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation

! **DO NOT RUN ORIFICES WITH SQUEEZE PUMPS.** *This cannot be done because squeeze pumps do not put out enough pressure for an orifice system. Squeeze pumps only put out 2-3 pounds of pressure.*

NOTE: *We normally recommend using only 1 orifice under pressure when running 15-30 lbs of pressure.*

! **NEVER USE 2 OF THE SAME SIZE ORIFICES IN YOUR SYSTEM!**

When installing optional orifice in TeeJet inline diaphragm check valves:

Colored Disc Orifice assembles under the check valve cap in most cases.

Remove seal from cap and insert orifice into the grooves in the seal.

Place orifice and seal dish up into cap. Reinstall cap on check valve body.

IMPORTANT: *Do not use wrench on cap. Hand tighten only!*



orifice in seal in cap

