

LIQUID FERTILIZER ATTACHMENT MOUNTING INSTRUCTIONS

Optional Fitting for Rebounders

JD 750/1560/1590/1860/1890 Drills

(Read Instructions Completely before Beginning Installation)

Mounting Instructions

Before you begin locate the "package contents" list to verify all items are included.

Package Contents (per single row)	
Item	Quantity
Stainless Steel tube.....	1
Black hose.....	1
NH3 hose.....	1
Instruction Sheet.....	1

NOTE: The standard mounting attachment is for the 10" JD press tire only (**fig. (a)**), and will not fit the 9" SDX or older JD 12" tires. These are special ordered.

Step #2: there are right side and left side brackets. The right sides are marked with a red "R" and go on the right side of the tire with short side stainless forward and long side down (**fig. (b)**). Start by removing the 5/8 bolt that mounts wheel/tire assembly to arm paying attention to shim stack and spacer placement. "All arms and/or wheels assemblies might not be the same!"

Step #3: remove one thin washer, that will be replaced by bracket arm, turn wheel so the 4 bolt heads are toward bracket. Re-install the bolt/spacer/shims (less one), paying attention that the tire will run **centered** in the furrow. Adjust if needed.

Step #4: IMPORTANT: tighten 5/8 nut to JD specs of **80 ft lbs**. This is only a basic adjustment and depending on planting depth and field conditions can be raised or lowered to prevent clods and or residue from wedging between tube and tire. NH 3 hose approximately 5" long can be added as a stiffener to end of stainless tube (**fig. (b)**) to keep 1/4 fertilizer supply hose in furrow.


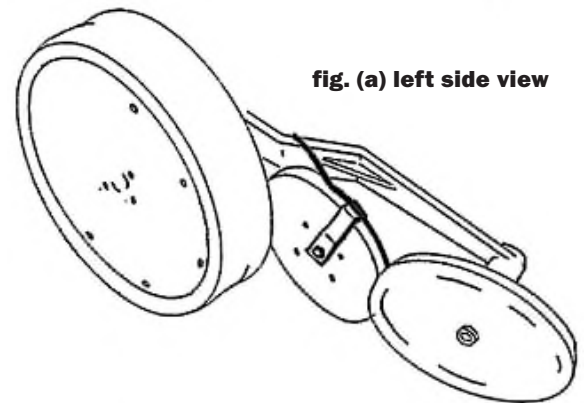



fig. (a) left side view

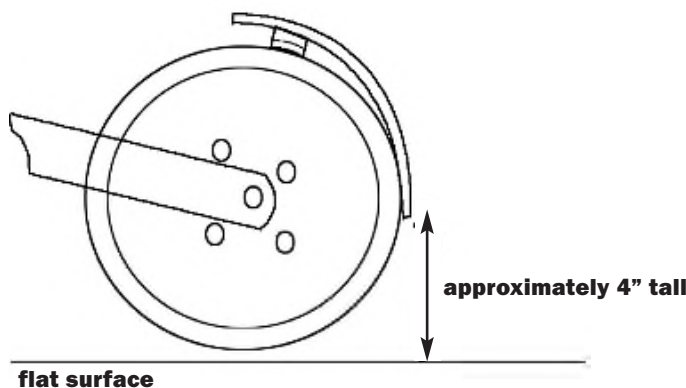

approximately 4" tall

flat surface

fig. (b) right side view

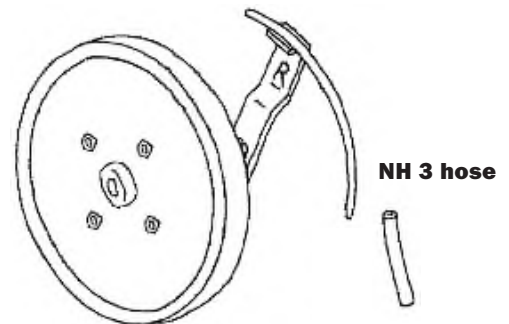

NH 3 hose

Call for info. on a NEW style fertilizer attachment for JD 750-1890 No-Till Drills