


# G4 MOUNTING INSTRUCTIONS

## Installing the No-Fertilizer Kit

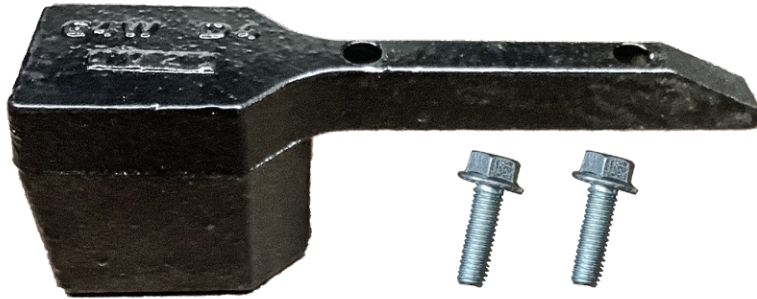

Before you begin, verify all “package contents” items

G4 No-Fertilizer Kit Package Contents	
Qty	Item
1	Weight Bracket
2	3/8" x 1-1/4" NC Grade 5 Spin Lock Bolt

### Why install the G4 No-Fertilizer Kit?

The G4 is an all cast walking beam using the 2x2 fertilizer disc with right or left-hand side brackets.

The G4 without fertilizer needs a weight bracket that bolts on right or left-hand sides in place of fertilizer disc.

This weight bracket takes place of the fertilizer disc to keep the walking beam from dropping down in the front when planter is raised up.



bolt weight here

### INSTALLING THE WEIGHT BRACKET

Using the two lock bolts, bolt the G4 weight into the two holes on the inside of the back end of the G4 arm. These are the holes normally used for the G4 disc mounting plate.

Install weight bracket so that the heavy mass part is directly behind the G4 arm.

Tighten assembly

