


G4 MOUNTING INSTRUCTIONS

Installing the Closing Wheels

John Deere – Kinze – White 6000 8000 9000 Planters

G4 Package Contents	
Qty	Item
2	5/8" x 4" NC Grade 5 Bolt
4	5/8" x 1/2" Wide Spacer
4	5/8" x 1/4" Wide Spacer

Before you begin, verify all "package contents" items

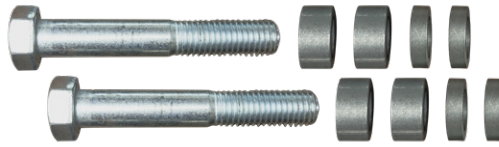

STEP #1:

Install spacers and wheel onto the bolt in the order dictated on the chart below.

STEP #2:

Then install this assembly into the 5/8" threaded hole on the G4 arm.

STEP #3:

Tighten assembly.



(G4 front) USE THIS HOLE!

5/8" threaded hole



(G4 back) USE THIS HOLE!

5/8" threaded hole

G4 SPACER CHART

Use chart to know which order to install spacers and wheels onto the bolt.

End goal is 2" - 2½" space between innermost points on the closing wheels.

Ideal is 2¼" space, with wheels closer together for wetter conditions and further apart for drier/optimum conditions.

FOR ALL SETTINGS: You can fine-tune adjustments by using 1/8" shim washers

NOTE: Spacers are painted for photo purposes only. 1/2" spacers = orange; 1/4" spacers = yellow

JD/OEM LEFTS

JD/OEM RIGHTS


FRONT WHEEL

G4 Arm ← [(1/4" + 1/2" + Wheel + 1/2" + 1/4") → Bolt]

[Bolt ← (1/4" + 1/2" + Wheel + 1/2" + 1/4") → G4 Arm



JD/OEM G4 Left Front

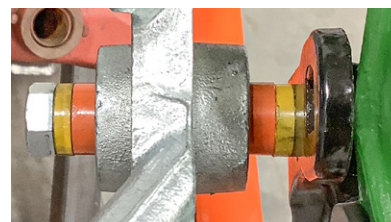


JD/OEM G4 Right Front


BACK WHEEL

[Bolt ← (1/4" + 1/4" + Wheel + 1/2" + 1/2") → G4 Arm

G4 Arm ← [(1/2" + 1/2" + Wheel + 1/4" + 1/4") → Bolt]

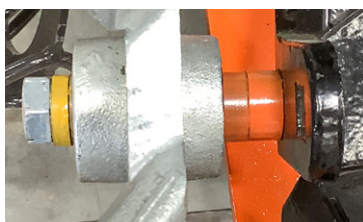

JD/OEM G4 Left Rear

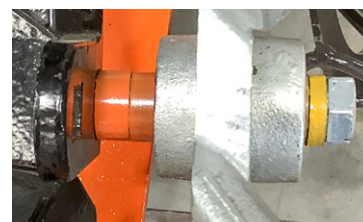

JD/OEM G4 Right Rear