

# CHICKEN TRACKER MOUNTING INSTRUCTIONS

## Case IH Planters (6" & 4" TINES)

(Read Instructions Completely before Beginning Installation)

**Before working on your planter**

**DANGER:** When storing or working on the planter, always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

- NOTE:**
- Case IH planters 950 and older have a 1/2" bolt and bushing in the press wheel.
  - Newer 955+ Case IH planters have a 5/8" bolt and bushing in the press wheel.
  - Some older 955 planters still have the 1/2" bolt. **CHECK THE BOLT SIZE IN YOUR 955 PLANTER BEFORE ORDERING.**
- We include 2 bore bushings in the kits for older planters to accommodate this difference.**


### CASE IH 955 & NEWER

Before you begin, verify all items listed in the "package contents" table at the right.

- Step #1:** Remove the original press wheel from your Case IH planter.
- Step #2:** Put the Chicken Tracker wheel in the place of the original wheel. Tines can be directed either way, but we recommend they run as shown in **fig. (a)** and **fig. (c)** (tips down when viewing from the back of the planter).
- Step #3:** Using the two original spacers on the outsides of the wheel, insert the original 5/8" bolt and bushing back through the planter and Chicken Tracker. Tighten.

#### Chicken Tracker Package Contents (per single row)

Item	Quantity
Chicken Track Press Wheel . . . . .	1
Instruction Sheet . . . . .	1

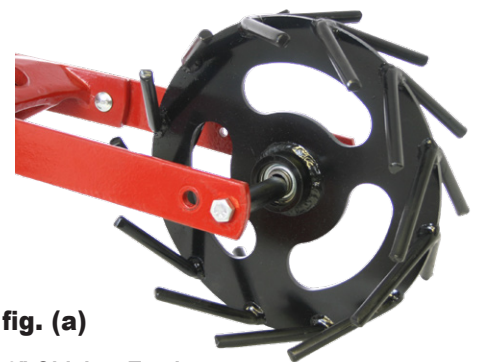

**fig. (a)**  
6" Chicken Tracker

### CASE IH 950 & OLDER

Before you begin, verify all items listed in the "package contents" table at the right.


- Step #1:** Remove the original press wheel from your Case IH planter.
- Step #2:** Put the Chicken Tracker wheel in the place of the original wheel. Tines can be directed either way, but we recommend they run as shown in **fig. (a)** and **fig. (c)** (tips down when viewing from the back of the planter).
- Step #3:** Slip the two 1/2" bore bushings into the center hole of the Chicken Tracker from either side. Bore bushings will nearly touch in the center [**fig. (b)** and **fig. (c)**].
- Step #4:** Using the two original spacers on the outsides of the wheel and bore bushings, insert the original 1/2" bolt and bushing back through the planter and Chicken Tracker [**fig. (b)**]. Tighten.

#### Chicken Tracker Package Contents (per single row)

Item	Quantity
Chicken Track Press Wheel . . . . .	1
1/2" Bore Bushing . . . . .	2
Instruction Sheet . . . . .	1



6" Chicken Tracker  
**fig. (c)**

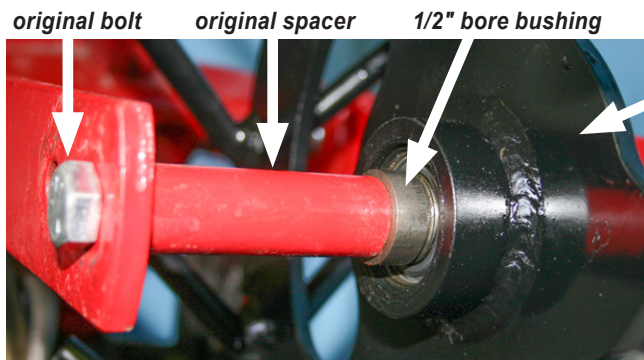

Chicken Tracker wheel

**fig. (b)**