

REBOUNDER® MOUNTING INSTRUCTIONS

1996 and Newer Marlist Drills

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation.

Mounting Instructions

Before you begin, verify all items listed in the "package contents" table.


Rebounder Package Contents (per single row)	
Item	Quantity
Rebounder.....	1
Saw Tooth.....	1
Tie Straps.....	2
Instruction Sheet.....	1

See **HELPFUL HINTS FOR MOUNTING REBOUNDERS TO DRILLS.**

On 1996 and newer models of the Marlist Drill, the disc scrapers are different. These scrapers come into contact with the Rebounder at the bend on the left-hand scraper only (fig. (a)). The seed tube and scrapers are slightly closed to the right hand opener, creating contact between the left hand scraper and the Rebounder.

To remedy this, grind out a section of the Rebounder approximately 1/16" x 1 1/4" - 1 1/2" on the left hand side (from behind the drill) fig. (b). Start just under the top tie strap notch. This will give the necessary clearance on the left hand scraper while leaving the Rebounder centered on the back of the seed tube.

Optional fittings are available for fertilizer/chemical applications. Options include, Y-Not Split-It, Hose Holder, or the Straight Shot, each available for an additional charge.

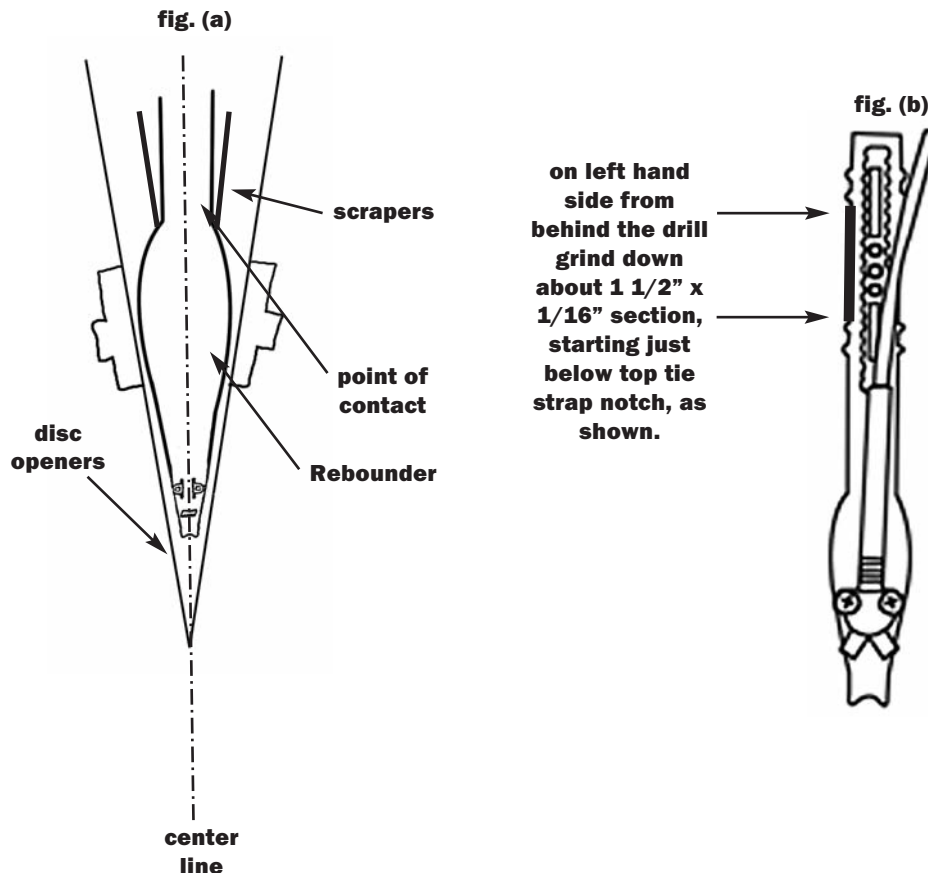

HELPFUL HINTS FOR MOUNTING THE REBOUNDER™ ON DRILLS

(Read Instructions Completely before Beginning Installation)

Before working on your planter or drill

DANGER: When storing or working on the drill always install cylinder stops or place the drill on stands to prevent personal injury or damage to the Rebounder.

WARNING: Do not roll back or back up the drill in or on the ground as this can result in damage to the Rebounder.

Helpful Hints

Step #1: use a farm jack on the press wheel to raise up the drill unit 3-4" before you mount the first row.

IMPORTANT: have press wheel adjusting handle of knob, in the position you would normally run in the field (see **fig (a)**).

Step #2: slide a board or piece of flat iron under the double disc openers and back under the press wheel tire. The board or flat iron represents the bottom of the seed V.

Step #3: now you can bolt the Rebounder to the bracket on the drill. Using the 1/4" bolts attach the Rebounder to the bracket on the drill.

Step #4: variances in the disc blade size will occur among individual drills as well as within any single drill. Measure discs behind the tire track rows. If they are worn more than other rows this process may need to be used to set these rows also.

Step #5: if replacing Rebounders on previously installed brackets, simply remove the old Rebounder without removing the disc blade. Using a small bar magnet or a long handled magnet, place the bolt on the magnet and slide it up between the discs and into the holes of the bracket and the Rebounder. This allows you to come in behind with a wrench or socket to install and tighten the nuts.

