

# REBOUNDER® MOUNTING INSTRUCTIONS

## John Deere ExactEmerg Planters

**Before working on your planter or drill**

**DANGER:** When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

**PLEASE:** Read instructions completely and verify all package contents before beginning installation

**NOTE:** The left hand disc blade, left hand gauge wheel, and tail section are removed in these photos for demonstration purposes only. **YOU DO NOT NEED TO REMOVE THESE PARTS WHEN INSTALLING THE REBOUNDER.**

The 4 LINK CLOSER is shown mounted in place of the JD tail section.

Rebounder Package Contents (per single row)	
Item	Quantity
Rebounder (5 hole) .....	1
1/4" x 7/8" Bolt.....	2
Whiz Nut.....	2
L-Bracket .....	1
Instruction Sheet.....	1


Bracket Package Contents (per single row)	
Item	Quantity
Mounting Bracket.....	1
Size 5 Small Tie Strap .....	1

### STEP #1:

If applying liquids in furrow with the Rebounder, attach either Y-Not Split-It, Hose Holder, or Straight Shot kit by following kit directions. **SEE KIT INSTRUCTIONS**

When bolting Rebounder to mounting bracket, place the L-bracket under the bottom nut.

The small tie strap serves to hold the fertilizer hose to the mounting bracket. Loop the small tie strap through the small hole in the middle of the mounting bracket. Tighten, leaving loose enough to thread fertilizer hose through the opening. Clip off the end.

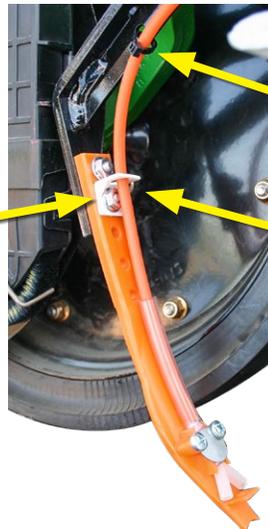

small tie strap holds fertilizer hose

L-bracket

hose, Y-splitter, and metal plate come with the Y-Not Split-It fertilizer kit



bolts go through 1<sup>st</sup> (top) and 3<sup>rd</sup> hole on mounting bracket



bolts go through top 2 holes on Rebounder

### STEP #2:

Use the two 1/4" x 7/8" bolts to bolt the mounting bracket to the underside of the Rebounder.

The bolts will go through the 1<sup>st</sup> (top) and 3<sup>rd</sup> holes of the mounting bracket and the top 2 holes of the Rebounder.

The L-bracket should be placed on top of the Rebounder and under the bottom bolt.

Secure bolts with the two whiz nuts on the top side of the Rebounder.

### STEP #3:

Remove the front bolt from under the front of the tail section mounting cast piece.

**KEEP THIS BOLT.**

Loosen the rear tail section mounting bolt.


### STEP #4:

Slip bracket up and under the rear bolt.


Reinstall front bolt.

### STEP #5:

Align tail section with planter, and then tighten bolts.

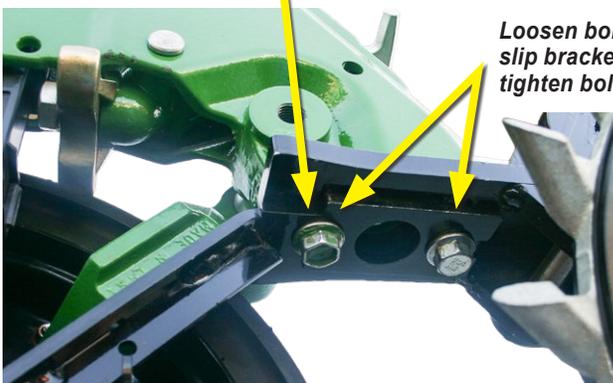

Loosen bolts, slip bracket in, tighten bolts

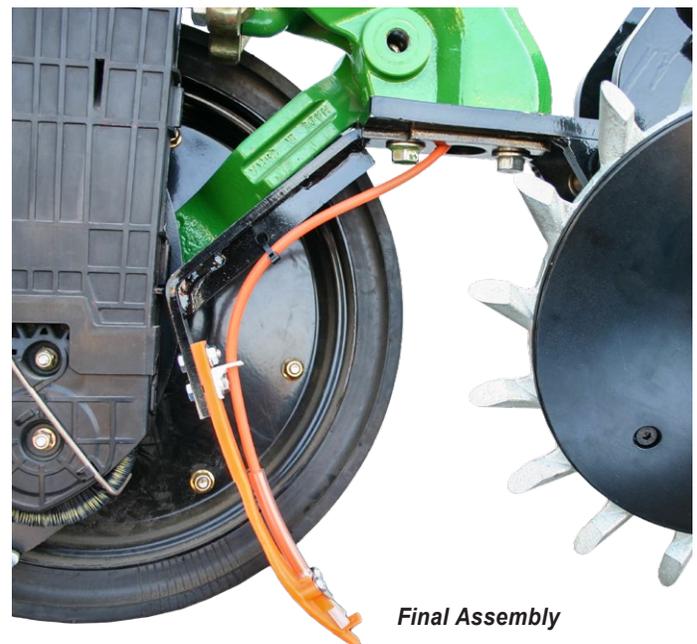

Final Assembly