

REBOUNDER® MOUNTING INSTRUCTIONS

Case IH 1200 NEW Seed Boot & Soybean Special 5400 Drills (15" space)

Before working on your planter or drill

DANGER: When storing or working on the planter or drill always install cylinder stops or place it on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation.

Verify all "package contents" items.
QTY ITEM list is per single row.


NOTE: Some of the original styles of seed boots on older Case IH planters and drills have become obsolete and are no longer available for purchase. When upgrading seed boots, this is the style of boot that will replace the obsolete seed boot on your older planter or drill.

Case IH part #84243285

(2009-present model, with hole for fertilizer, shown)

Case IH part #84195113

(early 2009 model, without hole for fertilizer)

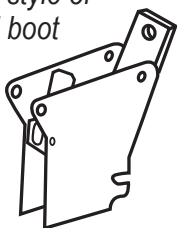

Rebounder package contents for part # OIH12N	
Qty	Item
1	Rebounder
1	Instruction Sheet

Mounting Bracket package contents for part # IH12NMB	
Qty	Item
1	Mounting Bracket
1	1/4" Whiz Nut
1	1/4" x 1-1/2" Roll Pin

1 Take seed boot off planter or soybean special drill.


2 Install Rebounder to welded-on bolt on the mounting bracket. The hole for the roll pin should be on the top side of the Rebounder.

Install nut to hold Rebounder in place; tighten.

3 Turn the bracket+Rebounder sideways to insert into seed boot and align roll pin hole on the bracket with roll pin hole on the boot.

They probably will not align; take note of how far off the holes are.

4 Use vice grips to bend back bottom part of welded-in "chair" in the center of the back of the seed boot so that the roll pin holes align.

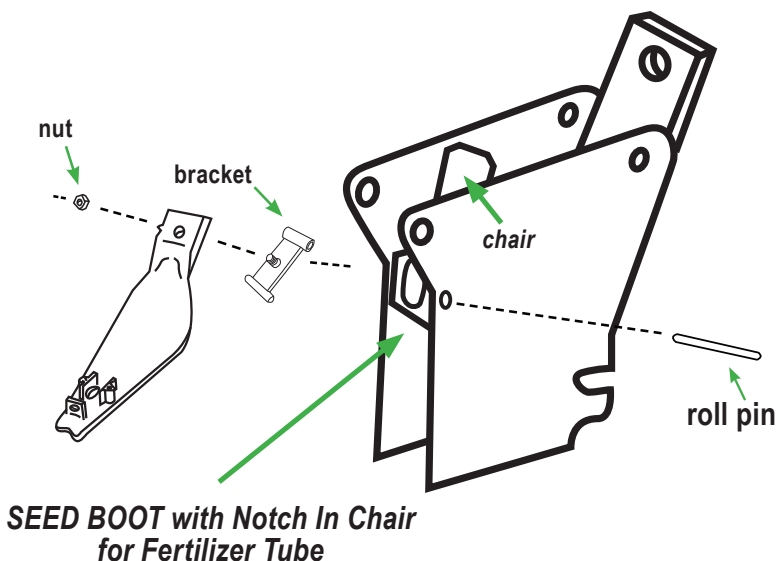

INSTRUCTIONAL VIDEO AVAILABLE ONLINE AT:

www.schaffert.com/products/rebounder/ih-seedboots.html

OVER →



REBOUNDER® MOUNTING INSTRUCTIONS

Case IH 1200 NEW Seed Boot & Soybean Special 5400 Drills (15" space)

5 Re-insert Rebounder and mounting bracket. Use a roll pin punch to pound the roll pin in through the seed boot and bracket.



6 Use a punch on the back of the chair to pound back into place. The bottom of the Rebounder bracket should seat fairly tightly against the back edge of the boot.

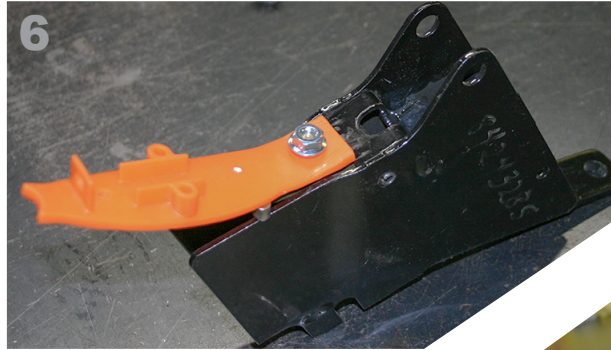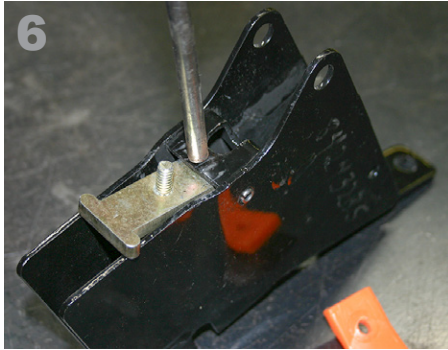

7 Check the top of the Rebounder—it should seat tight against the bottom of the welded-in chair. Use a punch on the top side of the chair's "seat", on either side of the hole, to firm chair in tight against the Rebounder. This helps keep the Rebounder from twisting.



The top of the Rebounder needs to be flush against the bottom of the chair.



8 If applying liquid in-furrow with the Y-Not-Split-It® or Hose Holder™, refer to the video or kit instructions to install the kit onto the Rebounder.

9 After installing optional fertilizer fittings, re-install the seed boot to your Case IH planter or drill.



INSTRUCTIONAL VIDEO AVAILABLE ONLINE AT:

www.schaffert.com/products/rebounder/ih-seedboots.html

Final assembly with
Y-Not kit on 5400
Soybean Special drill