

# WHEEL SCRAPER MOUNTING INSTRUCTIONS

## For the Chicken Tracker on Case IH Planters

Before working on your planter or drill

**DANGER:** When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

**PLEASE:** Read instructions completely and verify all package contents before beginning installation


**NOTE:** The following instructions are for mounting press wheel scrapers and Chicken Tracker scrapers to Case IH planters, both with and without the Furrow V Closer. Planters using the FVC take a different mounting bracket and bolt kit.

**STEP #1:**

Bolt the scraper bracket to the press wheel arm bracket:

*Planters with FVC:* Use the four 3/8" bolts and lock nuts.

*Planters without the FVC:* Use the two 1/2" bolts and nuts and the existing press wheel bolt.

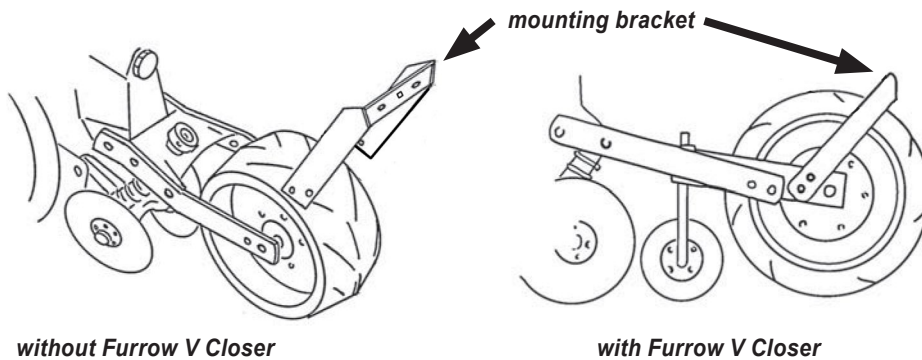

**Chicken Tracker Scraper Package Contents with FVC (per single row)**

Item	Quantity
Mounting Bracket. ....	1
Plastic Scraper. ....	1
3/8" x 1" Bolts. ....	4
Lock Nuts. ....	4
1/4" Whiz Bolts. ....	2
1/4" Nuts. ....	2
Instruction Sheet. ....	1

**Chicken Tracker Scraper Package Contents without FVC (per single row)**

Item	Quantity
Mounting Bracket. ....	1
Plastic Scraper. ....	1
1/2" x 1" Bolts. ....	2
1/2" Nuts. ....	2
1/4" x 1" Whiz Bolts. ....	2
1/4" Whiz Nuts. ....	2
Instruction Sheet. ....	1

**STEP #2:**

Bolt the plastic scraper to the top side of the mounting bracket with the 1/4" whiz nuts.

Adjust the scraper to wipe the mud off the press wheel, and tighten the bolts.

