

PRESS WHEEL SCRAPER MOUNTING INSTRUCTIONS

Case IH 2100 Planters

Before working on your planter or drill


DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation

STEP #1:

Bolt the plastic scraper to the top side of the mounting bracket with the 1/4" whiz nuts.

Adjust the scraper to wipe the mud off the press wheel, and tighten the bolts.

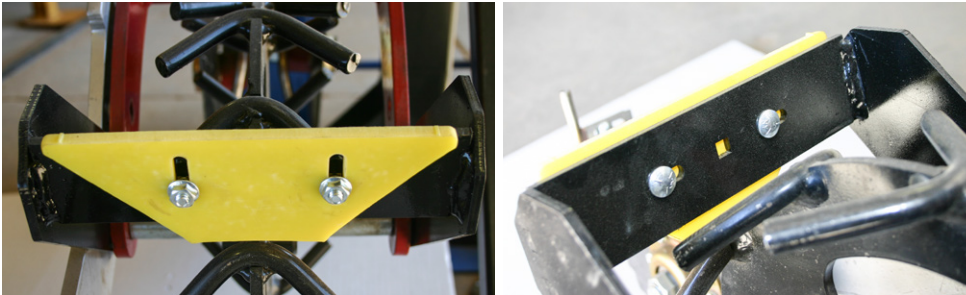

**Press Wheel Scraper Package Contents
(per single row)**


Item	Quantity
Mounting Bracket	1
Plastic Scraper	1
3/8" x 1" Carriage Bolts	2
3/8" Whiz Nuts	2
1/4" Carriage Bolts	2
1/4" Whiz Nuts	2
Instruction Sheet	1

STEP #2:

Remove the metric bolt from through your standard or Chicken Tracker press wheel and the tail of the row unit.

STEP #3:

Fit the scraper on the outside of the tail of the row unit. Hold in place with 3/8" x 1" carriage bolts in the hole shown. Replace your original metric bolt through the scraper bracket, tail section, and press wheel.

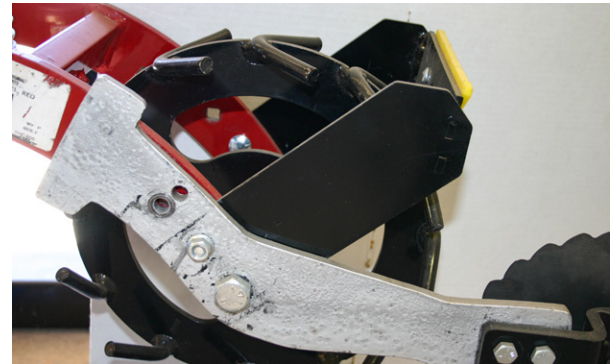

If mounting the G2 fertilizer disc, the arm for the bracket will mount onto the planter on the outside of the scraper bracket.



Final Assembly

