

WHEEL SCRAPER MOUNTING INSTRUCTIONS

For the Chicken Tracker on Case IH Planters

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

PLEASE: Read instructions completely and verify all package contents before beginning installation

NOTE: The following instructions are for mounting press wheel scrapers and Chicken Tracker scrapers to Case IH planters, both with and without the Furrow V Closer. Planters using the FVC take a different mounting bracket and bolt kit.


The scraper mounting bracket for Chicken Tracker and Case IH 1200 planters has two holes on each side and is wider than the scraper mounting bracket for Case IH 2100 planters, which is narrower with three holes on each side.

STEP #1:

Bolt the scraper bracket to the press wheel arm bracket:

Planters with FVC: Use the four 3/8" bolts and lock nuts.

Planters without the FVC: Use the two 1/2" bolts and nuts and the existing press wheel bolt.

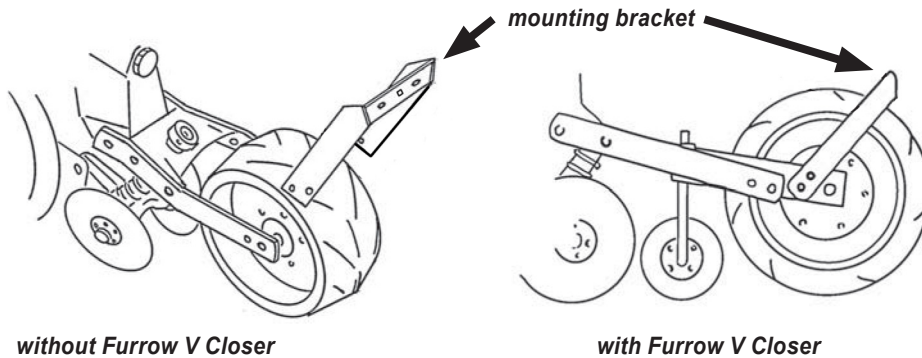



Chicken Tracker Scraper Package Contents without FVC (per single row)	
Item	Quantity
Mounting Bracket	1
Plastic Scraper	1
1/2" x 1" Bolts	2
1/2" Nuts	2
1/4" x 1" Whiz Bolts	2
1/4" Whiz Nuts	2
Instruction Sheet	1

Chicken Tracker Scraper Package Contents with Furrow V Closer (per single row)	
Item	Quantity
Mounting Bracket	1
Plastic Scraper	1
3/8" x 1" Bolts	4
Lock Nuts	4
1/4" Whiz Bolts	2
1/4" Nuts	2
Instruction Sheet	1

STEP #2:

Bolt the plastic scraper to the top side of the mounting bracket with the 1/4" whiz nuts.

Adjust the scraper to wipe the mud off the press wheel, and tighten the bolts.

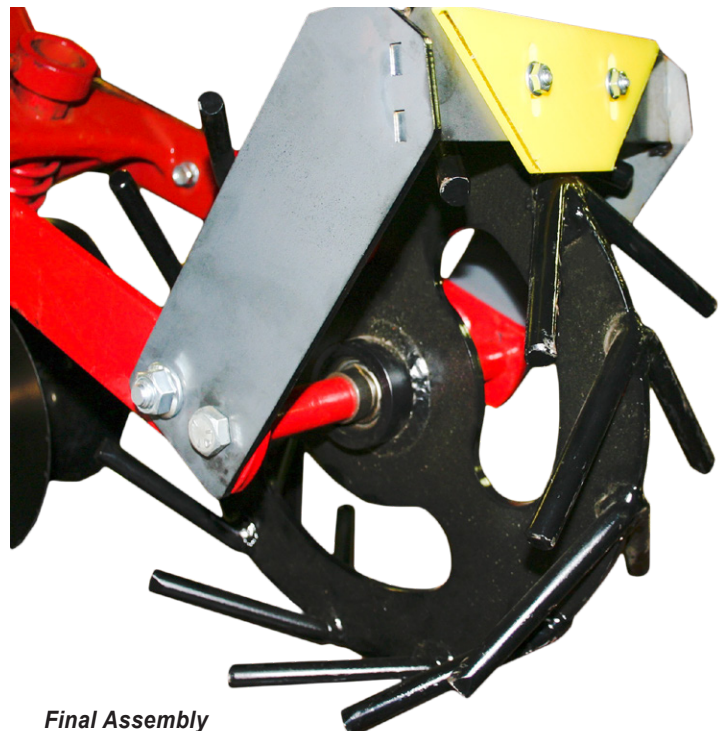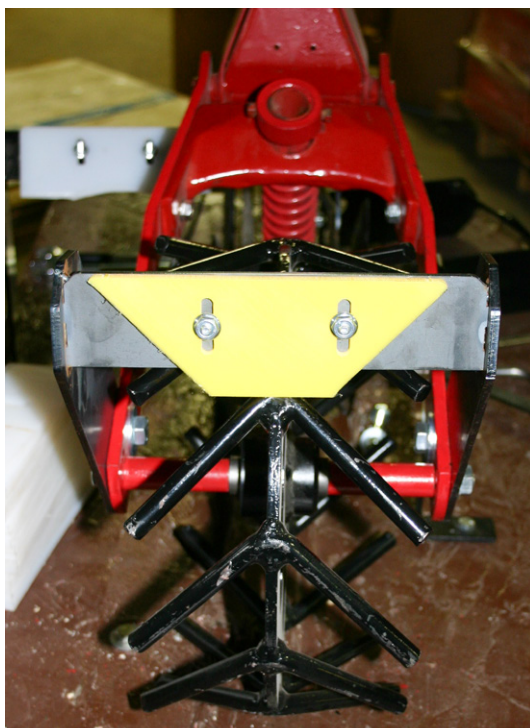

Final Assembly