

PRESS WHEEL SCRAPER MOUNTING INSTRUCTIONS


Case IH 2100 Planters with Chicken Tracker

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.


PLEASE: Read instructions completely and verify all package contents before beginning installation.

NOTE: The scraper mounting bracket for Case IH 800-1250 planters has two holes on each side and is wider than the scraper mounting bracket for Case IH 2100 planters, which is 1/2" narrower with three holes on each side.

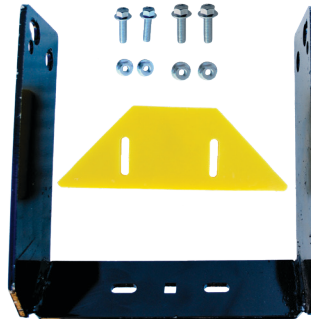


IH 2100 Chicken Tracker Scraper
Package Contents for part #: **PWSCT21**

Qty	Item
1	Mounting Bracket
2	3/8" x 1" Whiz Bolt
2	3/8" Whiz Nut
1	Chicken Tracker Plastic Scraper
2	1/4" x 1" Whiz Bolt
2	1/4" Whiz Nut
1	Instruction Sheet

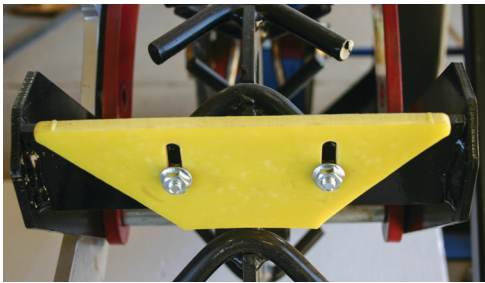

STEP #1:

Loosely bolt the plastic scraper to the top side of the mounting bracket with the 1/4" whiz bolts and 1/4" whiz nuts.

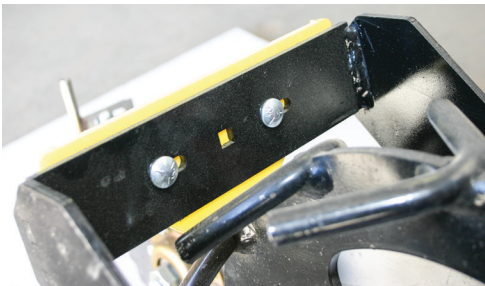

The bolts go through from behind the bracket and the nuts should be placed on top of the plastic scraper piece.

Adjust the scraper as needed to wipe the mud off the press wheel, and tighten the nuts.

STEP #2: Remove the metric bolt from through your standard or Chicken Tracker press wheel and the tail of the row unit.



STEP #3:

Fit the scraper bracket on the outside of the tail of the row unit. Hold in place with 3/8" x 1" whiz bolts in the small hole shown, and secure with 3/8" whiz nut on the outside of the bracket.

Replace your original metric bolt through the scraper bracket, tail section, and press wheel.



If mounting the **G2 fertilizer disc**, the arm for the bracket will mount onto the planter on the outside of the scraper bracket.

Final Assembly

