

FURROW V CLOSER MOUNTING INSTRUCTIONS

A/C 78-79 Air Planters

(Read Instructions Completely before Beginning Installation)

Before working on your planter or drill

DANGER: when storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments. Do not allow planter to rest on poly FVC discs as they can warp




Mounting Instructions

Before you begin, verify the "package contents" to ensure all items are included.

Step #1: Mount the FVC bracket to the planter unit using two 3/8" x 1-1/2" nuts and bolts (fig. (a)).

Step #2: assemble the disc to shaft with two 3/4" jam nuts so the disc is approximately 1-3/4" from the shaft. The bearing needs to be toward the outside (fig. (b)).

Step #3: position the shaft into the mounting bracket so that there is approximately 1" pitch out on the front of the disc (fig. (c)). Set the disc (with the planter in the soil) to a depth of 1/2" (3/4" max.) (fig. (d)). Tighten the set screws making minor adjustments to the Furrow V Closer while in the field. This will depend on the planting depth, speed and conditions. Re-check and tighten all nuts, bolts, and set screws.

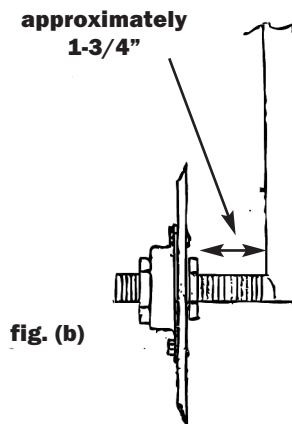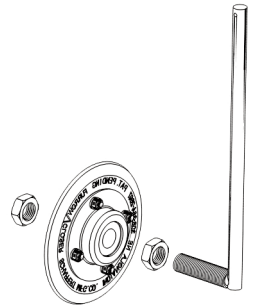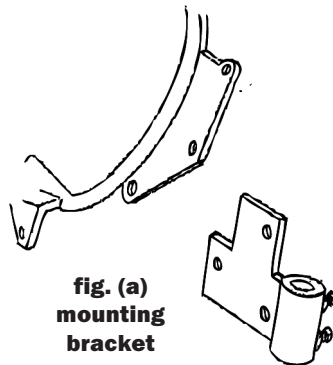

| A/C 78-79 Air Planters FVC Package Contents (per single row) | |
|--|-----------------|
| HARDWARE KIT | |
| Item | Quantity |
| 3/8" x 1-1/2" bolts..... | 2 |
| 3/4 jam nuts..... | 2 |
| Instruction Sheet..... | 1 |
| PARTS LIST | |
| Item & Part # | Quantity |
| *NOTE: some hardware is installed at the factory. | |

Important Points to Remember:

- When setting the pitch of the Furrow V Closer; lift the gauge wheel up so the FVC disc can properly be pitched. Gauge wheel tire will rest on FVC disc and will not hurt it.

