

REBOUNDER® MOUNTING INSTRUCTIONS

White 5000 / 6000 / 8000 Series Planters

(Read Instructions Completely before Beginning Installation)

Before working on your planter or drill

DANGER: When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the Rebounder. **WARNING:** Do not roll back or back up the planter in or on the ground as this can result in damage to the Rebounder.

Mounting Instructions

Before you begin, verify all items listed in the "package contents" table at the right.

Step #1: Remove the left disc (viewed from the rear of the planter - see [fig. (a)]). See back page for removing the seed tube clip on 1997 and newer White 6000 & 8000 Series planters.

Step #2: **NOTE:** If applying liquids in furrow with the Rebounder, attach either Y-Not Split It, Hose Holder, or Straight Shot kit by following kit instructions.

INSTALL KIT BRACKETS (T-NUT, L-BRACKET, WASHER, SCREW) BEFORE INSTALLING REBOUNDER TO SEED TUBE [fig. (b)] IF USING LIQUIDS IN-FURROW.

Step #3: With the left disc removed and seed clip out, you can now mount the Rebounder to the seed tube. Place sawtooth insert into the Rebounder (long slot up), and all the way to the top of the Rebounder [fig. (c)].

Step #4: **NOTE:** The White planter seed tube has riveted arrowheads or tabs sticking up on the back side of the seed tube. The bottom two arrowheads are used to position and stabilize the Rebounder. For Precision tubes refer to Precision mounting instructions.

Place the Rebounder over the two bottom arrowheads on the seed tube [fig. (d)].

Step #5: Using the 2 tie straps provided, strap the Rebounder to the seed tube. The tie straps will fit in the two sets of notches on the sides of the Rebounder. The long part of the tie strap should extend out the back of the seed tube and NOT to the side of the seed tube. Pull tie straps tight with pliers, and cut off excess length [fig. (e)].





Step #6: Install left disc back onto the planter. The Rebounder will naturally hang below disc blades 1"-2", and flex up when planting to follow the seed V made.

SPECIAL INSTRUCTIONS: On White 5000 series planters with an optional scraper on the inside of the discs, this scraper may need to be slightly ground down to accommodate the Rebounder. The Rebounder acts as a scraper on the inside of the discs so the scraper can be taken out.

Rebounder Package Contents (per single row)

| Item | Quantity |
|------------------------------|----------|
| Sawtooth Rebounder | 1 |
| Sawtooth Insert | 1 |
| Tie Strap | 2 |
| Instruction Sheet | 1 |

fig. (a)

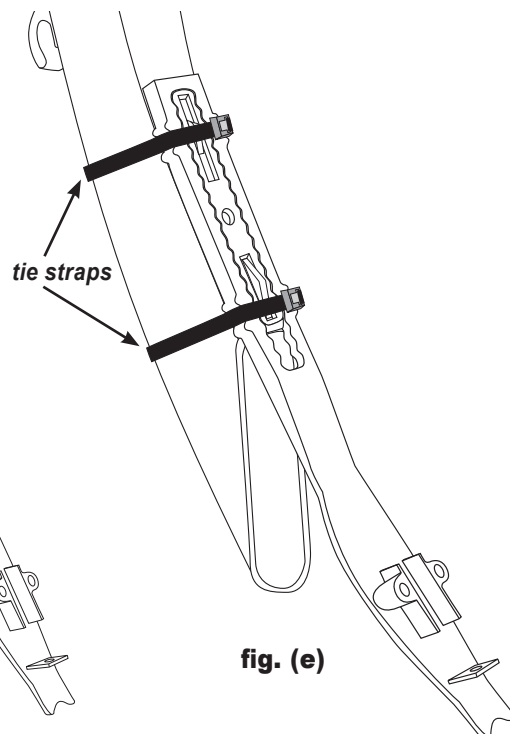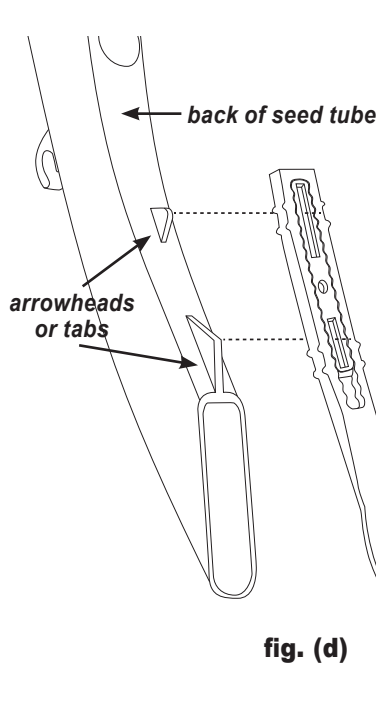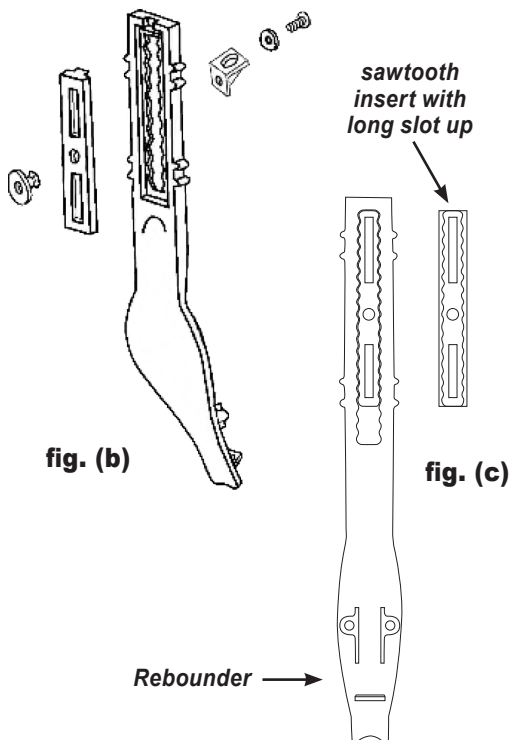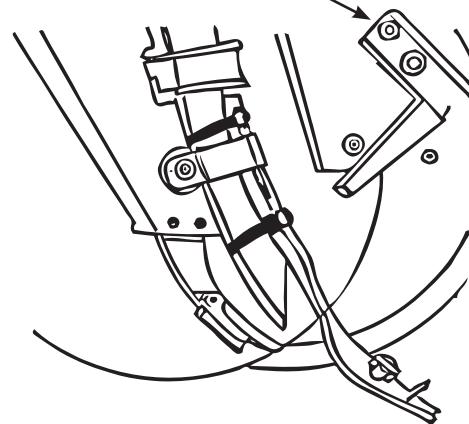

REBOUNDER™ MOUNTING INSTRUCTIONS

White 6000 & 8000 Series Planters Seed Tube Clip - With or Without Seed Tube Clip on 1997 & Newer Planters

continued...



(Read Instructions Completely before Beginning Installation)

Before working on your planter or drill

DANGER: when storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the Rebounder. **WARNING:** do not roll back or back up the planter in or on the ground as this can result in damage to the Rebounder.

Planter Checklist

Before installing the Rebounder, check the wear on the discs, wear guard, seed tube, and check blade contact. If you see wear on the sides of the seed tube at the bottom end, this is a good indication of excessive wear on the discs and wear guards. (see **table below**). Use the checklist at the right to determine the wear on each of your components. **NOTE:** have your seed meter calibrated every year by your local dealer to eliminate double and triples in seed metering.

| Planter Checklist | | | | | | |
|-------------------|--------------------------|---------|------------------|-------------------------------|------|--|
| Planter | Discs New - Replace @ | | Blade Contact | Wear Guard New - Replace @ | | Worn seed tube |
| White 5000 | 13 1/2" | 12 1/2" | 1 1/2" | 7/8" | 5/8" |  |
| White 6000 | 15" | 14" | 1 1/2" | 7/8" | 5/8" | |
| White 8000 | 15" | 14" | 1 1/2" | 7/8" | 5/8" | |
| | | | | | |  |

Mounting Instructions

Before you begin, verify all items listed in the "package contents" table at the right.

WITHOUT THE SEED TUBE CLIP:

Step #1: **NOTE:** The seed tube clip is NOT necessary if you are using the Rebounder on **1997 and newer** White 6000 and 8000 series planters. The Rebounder holds the seed tube centered in the furrow between the discs and it steadies the seed tube, keeping it from vibrating. The Rebounder is easy to install if you are not using the seed tube clip.

Step #2: in order to remove the seed tube clip, you must first remove the left disc (viewed from the rear of the planter). This will allow easy access to the seed tube clip. With the clip removed, the seed tube can be removed by taking the seed box off and not having to take a gauge wheel and disc off each time you want to install a Rebounder or check a seed sensor.


WITH THE SEED TUBE CLIP IN PLACE WITH THE REBOUNDER:

Step #1: you must remove the gauge wheel and disc each time you install Rebounders or check a seed sensor. There is adequate room under the clip to install the Rebounder. Place the Rebounder under the clip and over the bottom 2 arrow-heads of the seed tube.

Step #2: use the tie straps provided to hold the Rebounder to the seed tube.

Rebounder Package Contents (per single row)

| Item | Quantity |
|-------------------------|----------|
| Rebounder | 1 |
| Saw Tooth..... | 1 |
| Screws | 2 |
| Tie Straps..... | 2 |
| Instruction Sheet | 1 |

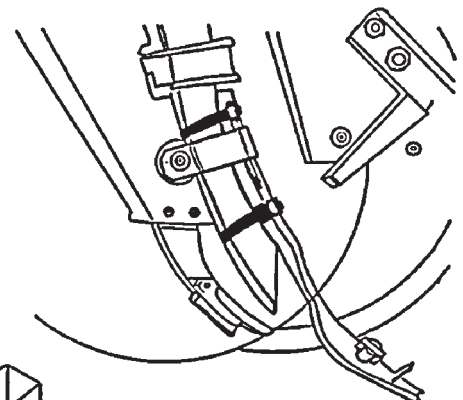

N855728 Seed Tube Clip Removed