

# G2™ MOUNTING INSTRUCTIONS

## Notched Prescription Tillage Disc

Before working on your planter or drill

**DANGER:** When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

**PLEASE:** Read instructions completely and verify all package contents before beginning installation.

**NOTE:** There are left-hand and right-hand G2 units (determined facing planter from the back).

**! WHEN INSTALLING THE NOTCHED PRESCRIPTION TILLAGE G2 FERTILIZER DISC, FOLLOW THE STANDARD G2 MOUNTING INSTRUCTIONS EXCEPT SWAP OUT THE STANDARD DISC FOR THE NOTCHED DISC.**

**SEE STEP #7**

### Notched G2 Fertilizer Disc Package Contents (per single row)



Item	Quantity
Notched Bearing, Disc, Hub (Assembly) . . .	1
<i>will take the place of standard smooth disc</i>	

### Installing the Notched Disc

- 7:** Slide 1/2" spacer and then fertilizer disc assembly (with the hub and nuts facing out away from the arm bracket) over the bolt.

***The notches on the disc should be pointed DOWN IN THE BACK.***

Thread 5/8" lock nut on bolt and tighten into place.

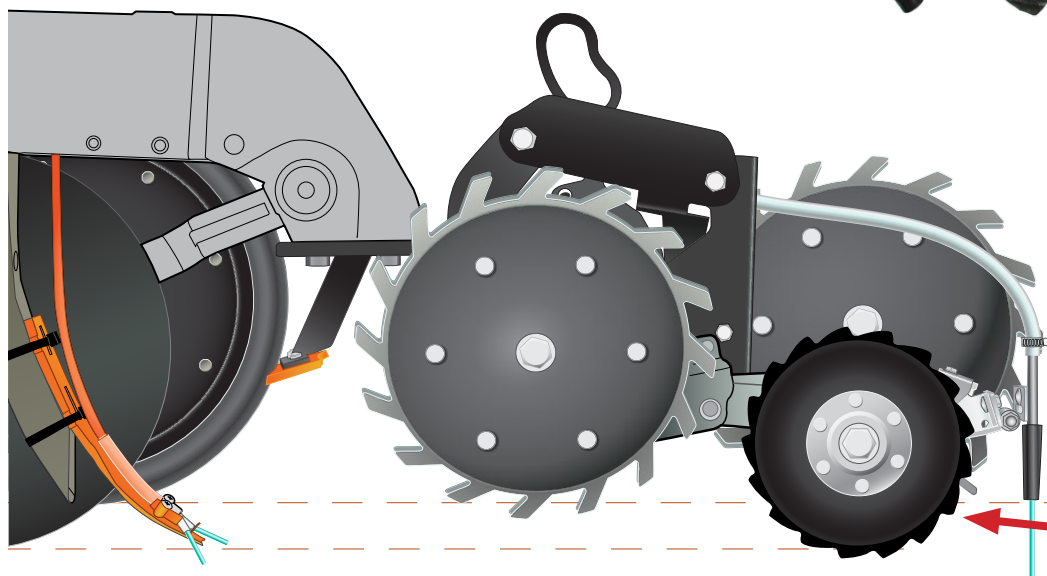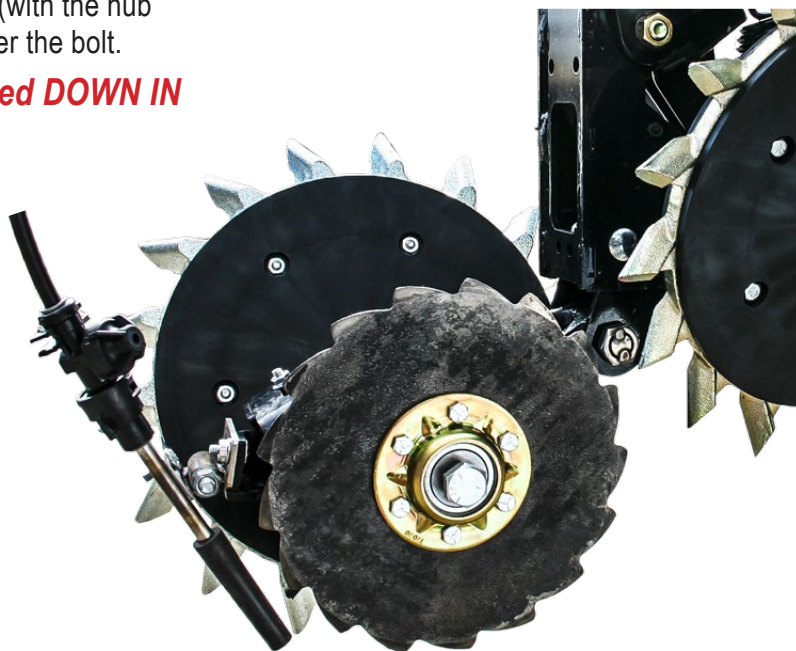

**notches down  
in the back**