

# REBOUNDER® MOUNTING INSTRUCTIONS

## White 9000 Series Planters — short slotted Rebounder

### Before working on your planter or drill

**DANGER:** When storing or working on the planter always install cylinder stops or place the planter on stands to prevent personal injury or damage to the attachments.

**PLEASE:** Read instructions completely and verify all package contents before beginning installation

**Step #1:** Remove seed metering system from planter.

**Step #2:** **NOTE:** If applying liquids in furrow with the Rebounder, attach either Y-Not Split It, Hose Holder, or Straight Shot kit by following kit directions. See kit instructions.

**INSTALL KIT BEFORE INSTALLING REBOUNDER TO SEED TUBE.**

**Step #3:** White 9000 Series Planter mounting with the 16" double disc openers.

**Step #4:** **NOTE:** White's seed clip is designed to center the seed tube between the opener discs, reduce vibration and wear, and consistently place seeds. The Rebounder does this and more, placing seeds in the bottom of the seed V. The seed clip is NOT necessary if you are using the Rebounder on White 9000 series planters. The Rebounder holds the seed tube centered in the furrow between the discs, eliminates vibration, minimizes wear, and guarantees uniform optimal seed placement.

You must take off the disc and gauge wheel to remove the seed clip and install the Rebounder for the first time. With the seed clip absent, the seed tube can easily be removed in the future by taking the seed box off and not having to take the disc and gauge wheel off each time you want to install a Rebounder or check a seed sensor. [fig. (a)].

**Step #5:** Using the 1/4" bolt and 1/4" washer, place washer on bolt and insert bolt in the 3rd hole from bottom of Rebounder and place the threaded mounting clip on bottom side of Rebounder and start bolt into threads [fig. (b)]. If applying liquid in-furrow, place the kit's L-bracket under the washer to bolt it to the Rebounder.

**Step #6:** Slip Rebounder up and over the bottom arrow or V notch sticking up on the seed tube. The tip of this V notch should be centered between the 2nd and 4th hole from the top of the Rebounder. Be sure mounting clip is placed on inside of tube to hold Rebounder in place. Tighten the bolt that holds Rebounder in place [fig. (c)].

**Step #7:** Next place tie straps around seed tube. One strap is placed at top of Rebounder between the first 2 holes. The bottom tie strap is placed above bolt and washer or over the 4th hole from the top of Rebounder [fig. (d)].

**Step #8:** Now you are ready to install the seed tube back into the planter.

Rebounder Package Contents (per single row)	
Item	Quantity
Rebounder 7 Hole .....	1
Tie Strap .....	2
Instruction Sheet .....	1

Bracket Package Contents (per single row)	
Item	Quantity
Mounting Clip .....	1
1/4 x 5/8" Bolt .....	1
1/4" Washer .....	1

fig. (a)

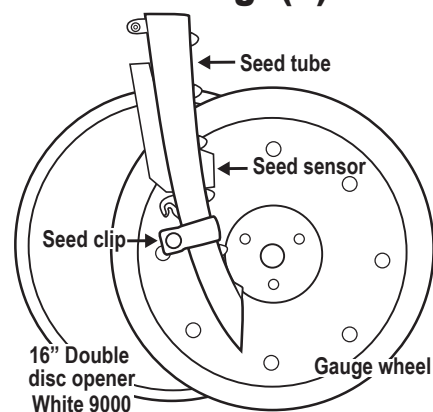


fig. (b)

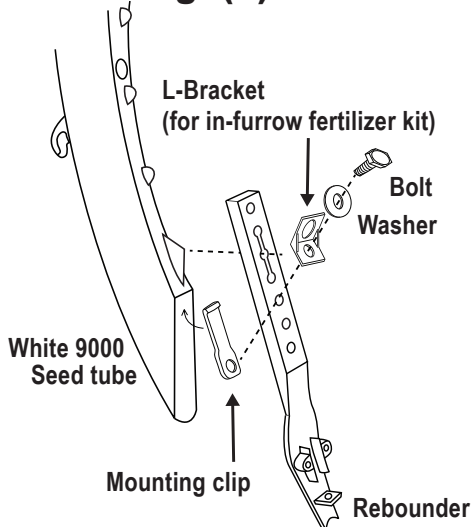


fig. (c)


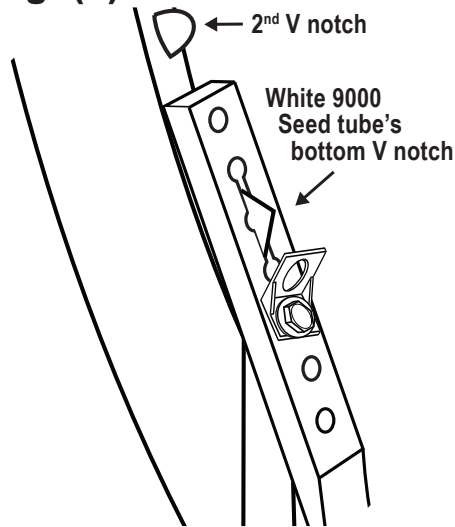


fig. (d)

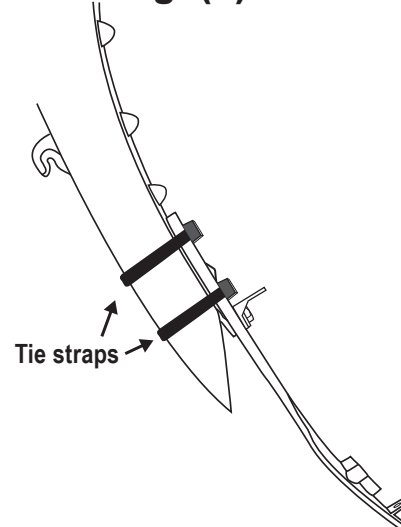

## THE REBOUNDER™ SEED COVER

### ABOUT THE REBOUNDER

For ten years now, the Rebounder has proven to be a sensible solution for farmers nation-wide & abroad, not only increasing yields but also overall profits. With the passing of each planting season, we sit down and discuss the new changes that would not only make our Rebounder Seed Cover a better product, but also our other Profitable Seed Solutions. We understand the needs of farmers and try to stay abreast of the latest changes affecting them. Our products endure rigorous field tests, making them a dependable solution for years to come. Visit our website to see what farmers are saying about our products: [www.schaffert.com](http://www.schaffert.com)!

### VIGOROUSLY FIELD TESTED

As the double discs on a planter open a seed V in wetter, heavier soils, they tend to "orange peel" the side wall. Seeds can lodge on the side wall and not get all of the way to the bottom of the seed V. If you dig in the seed trench where the Rebounder has passed, you will find all of the seeds at the bottom of the seed V. The half moon notch in the end of the Rebounder keeps the Rebounder 1/4 - 1/2" off the bottom of the seed V eliminating any seed drag. When mounted to the seed tube, the Rebounder puts less than one pound of pressure on the seed tube when planting, keeping it from vibrating and helping to eliminate seed bounce. This small amount of pressure in the seed furrow row also eliminates mud from building up when planting in heavy, wet textured soils.

## FREQUENTLY ASKED QUESTIONS

### DOES THE REBOUNDER PULL SOIL IN WITH THE SEED?

The only time the Rebounder puts soil with the seed is in heavier wetter soils when the double discs that open the seed V orange peel the sidewall of the seed V. This is where the Rebounder shines over other attachments because it is shaped like the seed V it will peel the lodged seeds off the orange peeled side wall funneling them to the bottom.

### DOES THE REBOUNDER PULL LOOSE DRY SOIL OFF THE SOIL SURFACE AND PLACE WITH THE SEED?

NO! - The Rebounder is shaped like the seed V - it runs in the seed trench. The Rebounder enters the seed V directly behind the double disc openers and ahead of the gauge wheels that run along side the seed V. This lets the Rebounder put all the seeds in the bottom of the seed V before the gauge wheels cave any dry soil in over the seed. The Rebounder assures you better germination being in the bottom of the V with moisture on 3 sides of the seed and dry soil on top.

### DOES THE REBOUNDER LEAVE SEEDS STRANDED ON THE SIDE WALL OF THE SEED V OR PRESS THEM IN THE SIDE WALL WHEN THEY LODGE ALONG THE SIDE?

NO! - The patented concave shape of the Rebounder eliminates seeds from being stranded on the side wall. The Rebounder puts the seeds in the center of the bottom of the furrow. Other attachments with flat or rounded surfaces sometimes can leave seeds lodged in the sidewall. As one farmer put it when using other attachments "it's like stacking two ball bearings or two marbles and trying pressing them into the soil—you never know where they will end up."

### HOW DOES THE WHITE REBOUNDER COMPARE TO THE ORANGE SUPER TUFF REBOUNDER IN WEARABILITY?

A good rule of thumb is take the length of the bar of your planter or drill and add two zeros to it, that's normally the life of the White Rebounder. The Orange Super Tuff Rebounder is a totally different molding process where the molecules in the Rebounder stand up making the wearability superior to the White Rebounder where the molecules lay down. The Orange Rebounder will double to triple the life of the White Rebounder. Many farmers planting or drilling many acres with the Orange Rebounder these past 2 years make the comment that the Orange Rebounder will last the life of their disc blades.

### WHITE VS. ORANGE?

The Super Tuff Orange Rebounder takes durability to the next level. Easily distinguished by its bright orange color, the Super Tuff Orange Rebounder gives you all the benefits of the White Rebounder but can last 2-3 times longer. As stated above, we are continually looking for ways to improve our product, and one key component that has proven very effective is the new molding technique that we've incorporated. With this process, the plastic molecules stand up and act like little springs making the wear of the Super Tuff Orange Rebounder longer and better. The feedback we've received has been outstanding! In addition to the greater durability, we have also improved the Y-Not Split-It fastener, with an easy to use on/off screw design - no more need for ties!

### LIQUID FERTILIZER ATTACHMENTS

Each Rebounder has the option of allowing liquid fertilizer or chemical application. This can be accomplished directly in the furrow with the Hose Holder kit or off to each side with our Y-Not Split-It kit. See our section titled: Rebounder Optional Fittings for full details.

### WILL THE REBOUNDER DRAG SEEDS IN THE SEED FURROW?

NO! - As the double discs or True V openers of the planter make the seed V opening the Rebounders trailing end runs about 3/8" off the bottom of the seed V. The Rebounder was designed to be wider than the bottom of seed V thus letting it flex up off the bottom about 3/8". The half moon notch in the end of the Rebounder centers the seeds in the bottom letting them pass through without being drug along.

### DOES MUD BUILD UP ON THE REBOUNDER WHEN SOIL CONDITIONS ARE STICKY?

NO! - The Rebounder does not put pressure in the bottom of the seed V where mud build up can occur in heavier wetter soils. We tell farmers that if they feel comfortable planting and it is wet that they don't have to worry about the Rebounder building up with mud and dragging seeds. Part of the no mud build up is due to the flexibility built into the Rebounder above the spoon area. This will be discussed in the next question.

### DOES THE REBOUNDER NEED TO BE ADJUSTED FOR PROPER TENSION IN THE SEED V?

NO! - The Rebounder was designed out of plastics that have an automatic flexibility built into it to compensate for the different soil types and conditions one might be planting in. This designed flexibility was built in above the spoon area and below the tie or bolted area of the Rebounder. This Rebounders simple design eliminates the need for built in tension adjustment that make it confusing in different soil types and soil conditions to adjust.

### WHY DOES THE REBOUNDER MOUNT TO THE SEED TUBE?

The Rebounder has been mounted to the seedtube ever since it was invented over 10 years ago. The Rebounder puts very little pressure on the seed tube preventing damage to the seed tube. The Rebounders shape centers the seed tube in the seed trench behind the double disc openers, keeping the seed tube from rubbing and wearing on the discs. The Rebounder also steadies the seed tube keeping it from vibrating in its holder, thus keeping seeds from bouncing in the seed tube. Schaffert Mfg. & Sales strives to make it as simple as possible!

### WHY IS THERE MORE WEAR ON ONE SIDE OF THE REBOUNDER?

Check for a bent planter unit. Also, all right or left lead discs will make the planter trail off to one side causing it not to pull straight. This can lead to excessive wear on planter parts and attachments.